




**UMC1200 Series  
Humidity and Temperature Program  
Controllers  
(V 2.0)**

**User's Manual**

## Contents

<b>I. Controller's Window Flow Chart</b>	2
<b>II. Detailed Functions Introduction</b>	2
1. Initial Interface	2
2. Mode Selection	3
3. Program Control	4
4. Fixed Value Control	12
5. Real-time curve	18
6. History Curve	19
<b>III. Advanced Operation</b>	21
1. Historical Dump	22
2. Document Backup	24
3. Manual Debugging	25
4. Fault Record	27
<b>IV. System Setting</b>	28
1. Time Setting	29
2. Pre-set Boot	30
3. Power Failure Recovery	31
4. Cumulative Run	31
5. Modification of User Privilege Password	31
6. Screensaver Time	32
7. IP Address Settings, DHCP Function	32
8. Touch Calibration	32
<b>V. Product Information</b>	33
<b>VI. UMC1000_User Host Software</b>	33
1. Software Functions	33
2. Communication Settings	33
3. Software Installation	34
4. Software Login	37
5. Communication Connection	38
6. Use the Host Software to Export Files from the Controller	39
7. Examples of History Playback	39
8. Use the Host Software to Create or Modify Process file	40
9. Use the Host Software to Play back Historical Data	41
10. Use the Host Software to Conduct Remote Control	42
11. Description of File Types Involved in the Operation of Host Software	42
<b>VII. Ethernet Connection</b>	42
<b>Appendix: List of Correspondence Address</b>	44



## I. Controller's Window Flow Chart

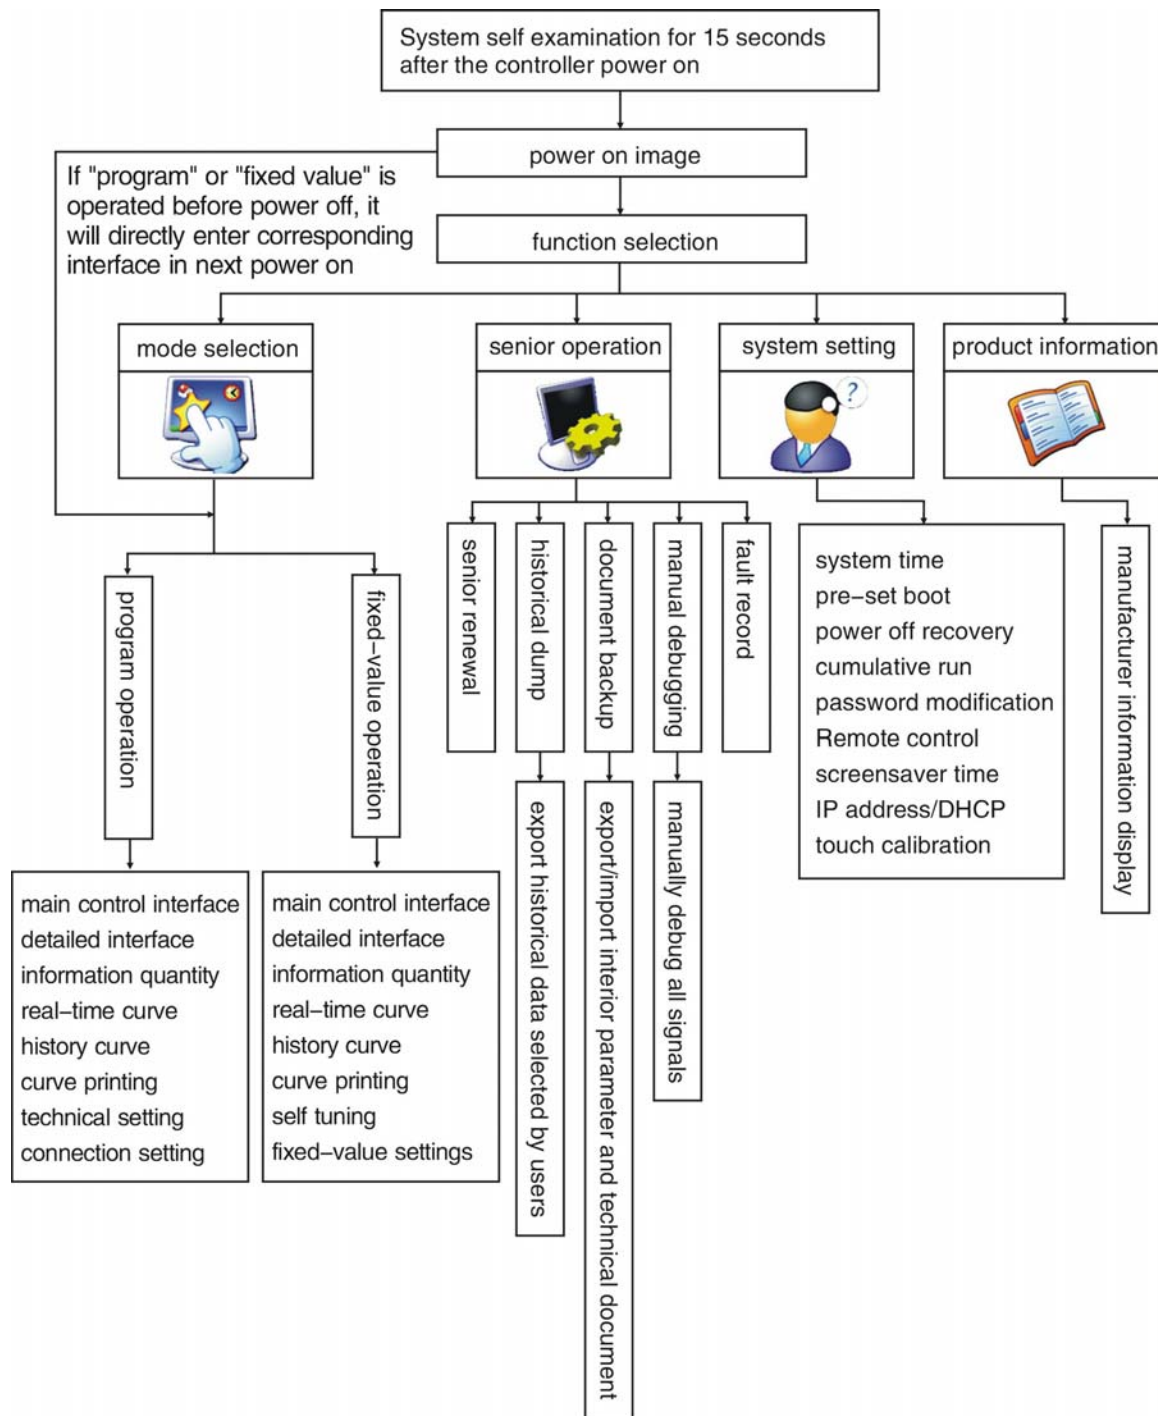

## II. Function introduction

### 1. Initial Interface

After being electrified for the first time and self examination of 15 seconds, the instrument will change from the initial interface to system function selection interface. Users should notice that if you choose “program control” or “fixed-value control” before cutting off the power, it will enter directly corresponding main control interface of last power off when it is electrified again.

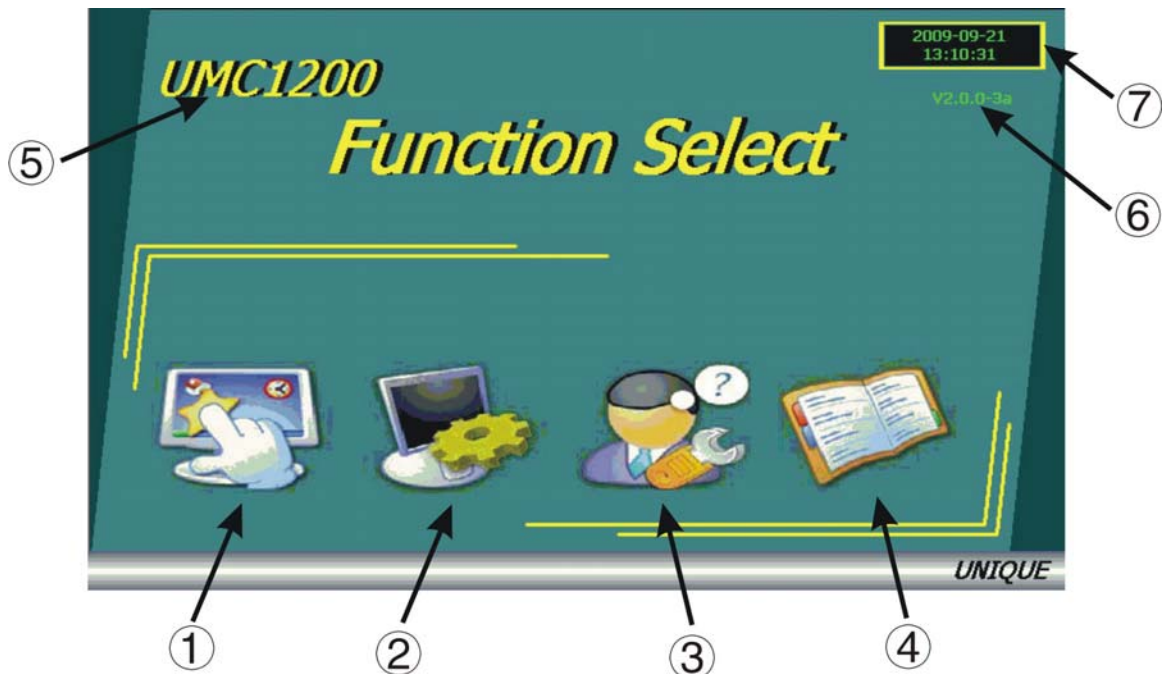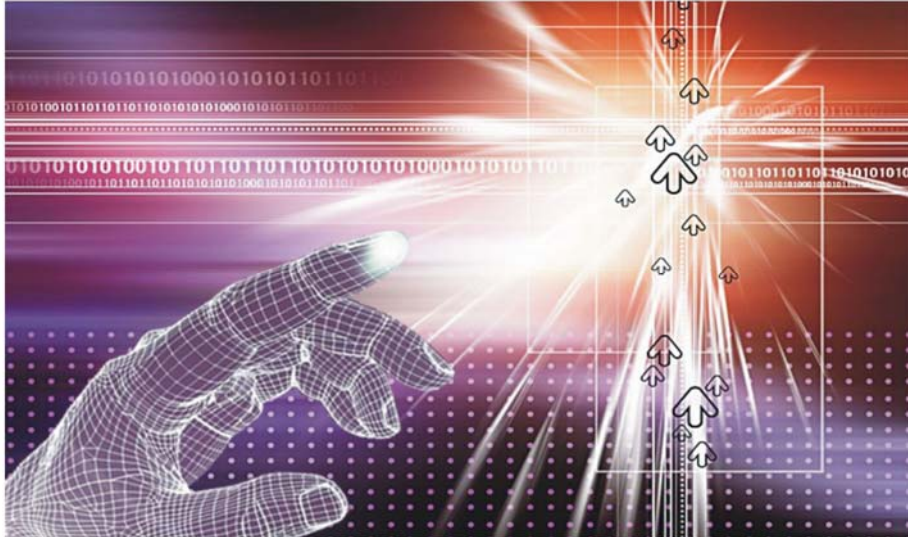

Item	Name	Description
①	Mode selection	Program control and fixed-value control selection
②	Advanced operation	Include advanced renewal/ history dump/document backup/manual debugging/ faults record
③	System setup	System parameters setup
④	Product information	Display product information
⑤	Company name/product model	Company name and product model
⑥	Product version number	Display version number
⑦	System time	Display current system time

## 2. Mode Selection


After clicking mode selection button in function selection interface, it goes into operation mode selection interface, which includes fixed-value operation and program operation. After users select the operation mode, if the controller is electrified, it will go directly into corresponding control mode of




last power off.



Item	Name	Description
①	Program control	Enter program operation mode
②	Fixed-value control	Enter Fixed-value operation mode
③	Mode Graphic Display	Control of mode icons
④	Return	Return to function selection interface

### 3. Program Control

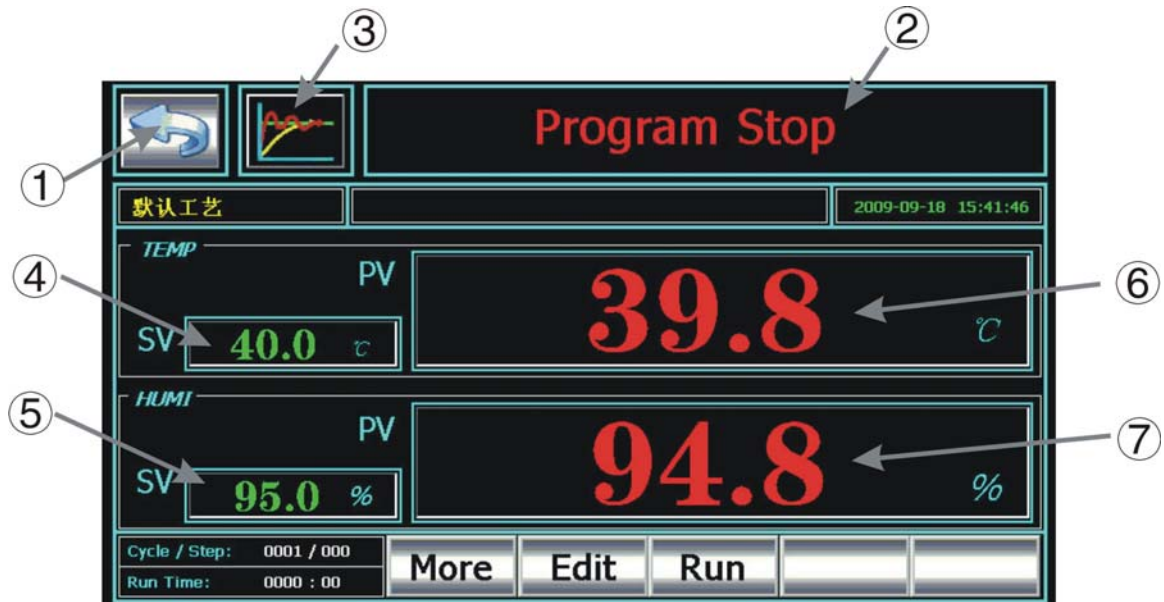

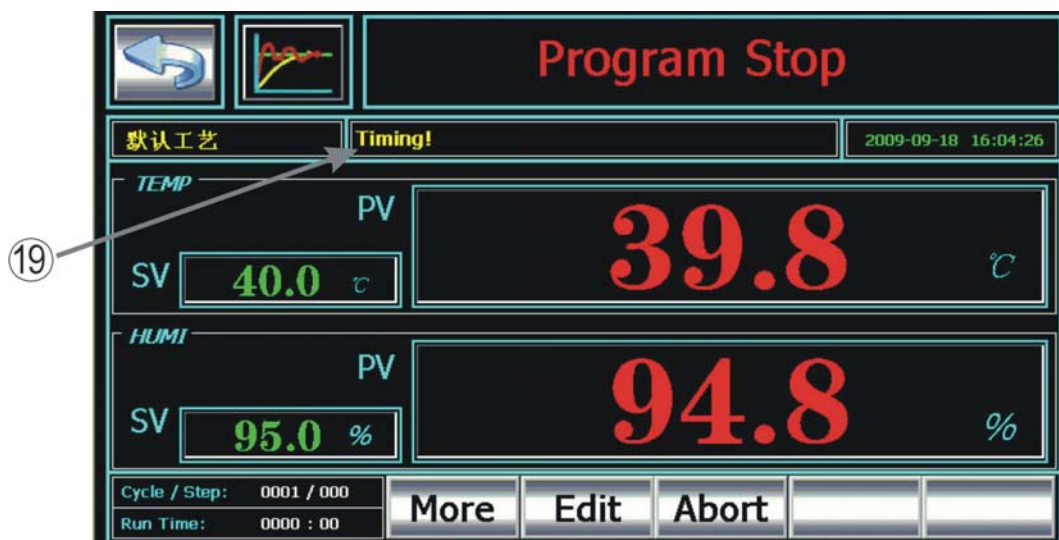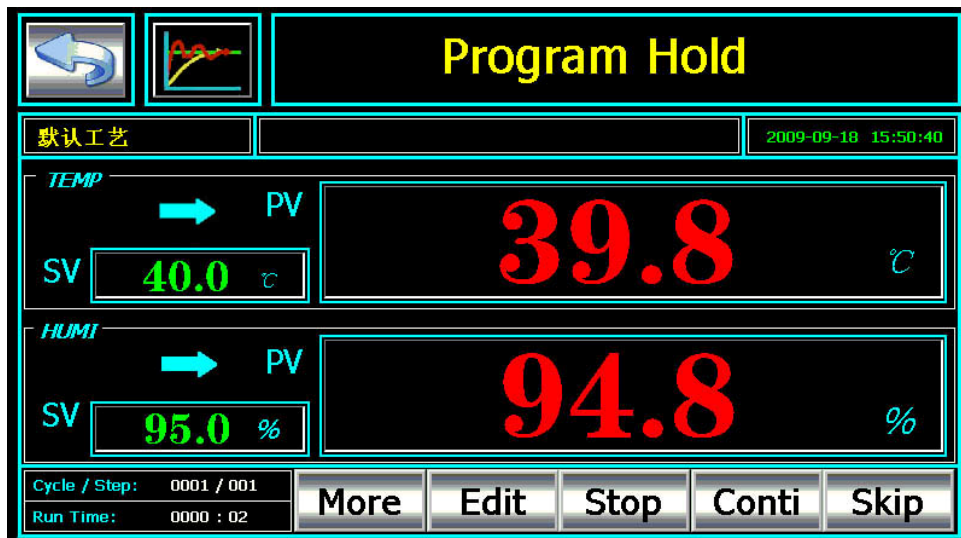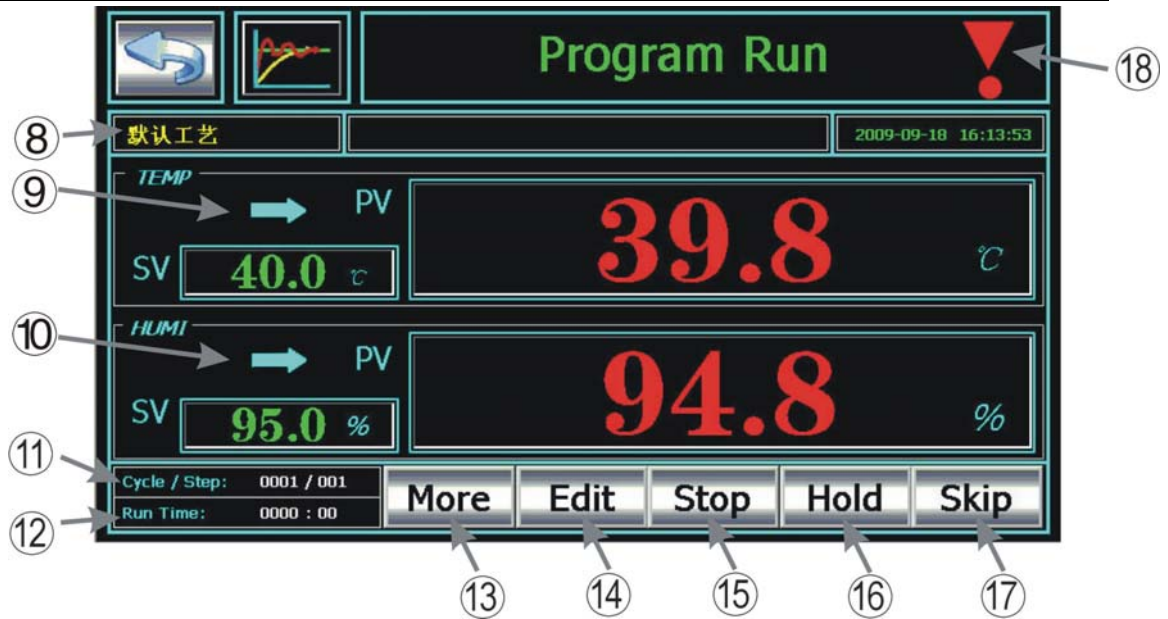



Item	Name	Description
①	Return button	Return to the menu of previous step
②	Program operation status	Current program operation status
③	Curve check	Real-time curve/curve history check, printing history
④	Temperature SV value	Display current set temperature value
⑤	Humidity SV value	Display current humidity measured value
⑥	Temperature PV value	Display current temperature measured value
⑦	Humidity PV value	Display current humidity measured value
⑧	Current process name	Display currently operating process name and connection
⑨	Temperature indication	Arrow up/middle/down means up/remain/down of temperature
⑩	Humidity indication	Arrow up/middle/down means up/remain/down of humidity
⑪	Current cycle bugle	Display current cycle times/ bugles
⑫	Process operation time	Display current process operation time
⑬	Detailed interface button	Display detailed interface button
⑭	Edit button	Program process and connection button
⑮	Stop button	Program operation stop button
⑯	Maintain button	Program operation remain button
⑰	Skip button	Program step skip button
⑱	Alarm indicator	When the system has a fault, it will alarm with a flashing indicator. Click to check more.
⑲	Reservation indicator	Awaiting the system's reservation to power on

Detail information interface of program control:

Clicking “detail” button in program main control interface will lead to detail information interface of program control, which enables users to check detailed information about the system status and observe the system's working condition.


Process setup:

Clicking “edit” button in program main control interface will lead to process setup interface, in which users can check process curve of humidity, select process to set.

Introduction to operation buttons of program control main control interface:

- 1) Operation: Operate current process.
- 2) Stop: End current operating program.
- 3) Maintain: Maintain current program status.
- 4) Continue: Program operation recovers.
- 5) Skip: Skip current step to next program.
- 6) Cancel: Cancel set reserved operation.
- 7) Detail: Go to detailed interface of program control.
- 8) Edit: Go to process selection interface.

Click A and B area in detail program interface, and the user's logging in dialog box will pop up. After user selection and code confirmation, it will go to “input correction” interface.

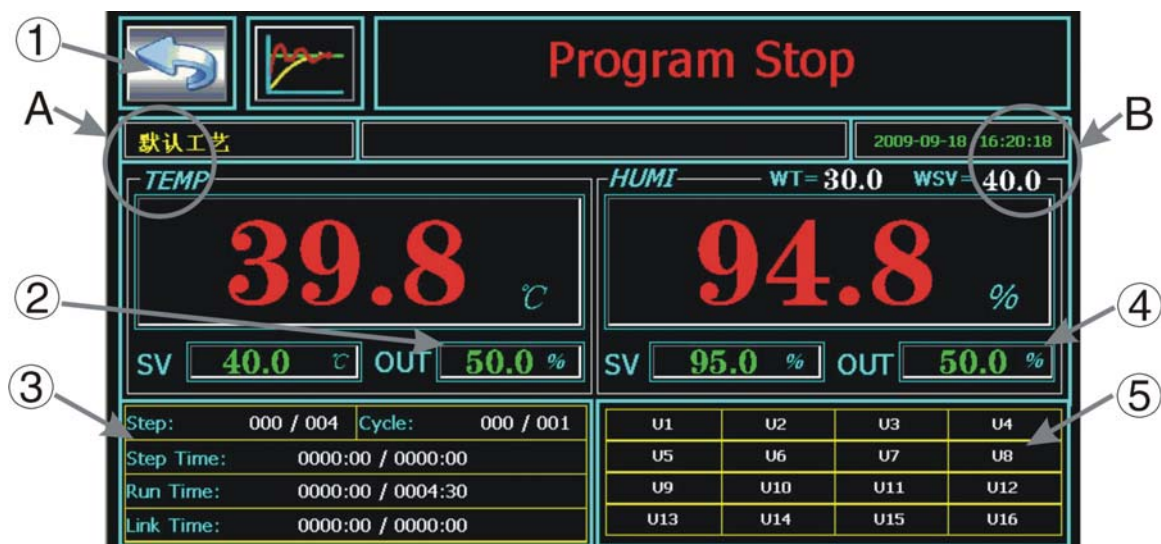

Item	Name	Description
①	Return button	Click this button to return to program main control interface
②	Temperature OUT%	Display current temperature output percent
③	Program information	Display relevant information of program operation
④	Humidity OUT%	Display current humidity output percent
⑤	DCU output point name	Click to go to signal quantity interface

Introduction to operation information of program control detailed interface:


- 1) Total process steps: Display total steps of current operating program
- 2) Current bugle: Display current bugle of current operating program
- 3) Cycled number: Complete cycled number of current operating program
- 4) Total cycle number: Necessary total cycle times of current operating program
- 5) Total process time: Necessary time to operate all program steps cycle
- 6) Operated time of process steps: Already operated time of current program (automatically reset before start of each step)
- 7) Already operated time: Current cycle operating time (automatically reset before start of each cycle)
- 8) Total operated time of the process: Total operated time from startup to the present (Time equals total process time multiplied by cycle times after the completion of program operation.)
- 9) Connection total operation time: The time needed for the connection completion of current operating program (equal to the total amount of connecting all process operation time)
- 10) Connection operated time: Total time from startup to the present (after connection operation, the time equals connection total operation time)




Signal							
TS1	TS2	TS3	TS4	TS5	TS6	T.R	H.R
TA1	HA1	IS1	IS5	OS1	OS5	T.U	H.U
TA2	HA2	IS2	IS6	OS2	OS6	T.D	H.D
TA3	HA3	IS3	IS7	OS3	OS7	T.S	H.S
TA4	HA4	IS4	IS8	OS4	OS8	REF1	REF2
EVT1	EVT2	EVT3	EVT4	EVT5	EVT6	EVT7	EVT8
ERROR	LIGHT	PTEND	DRAIN				

Introduction to information of information quantity interface:

- 1) TS1~TS6: Display the signal status when the program operates path 6
- 2) IS1~IS8: Display IS signal status of current path 8.
- 3) OS1~OS8: Display OS signal status of current path 8.
- 4) T/H.AL1~T/H.AL4: Alarm signal status of humidity path 4.
- 5) T/H.RN: Signal status of humidity operating
- 6) T/H.UP: Signal status of humidity up
- 7) T/H.DN: Signal status of humidity down
- 8) T/H.SK: Signal status of humidity maintenance
- 9) EVT1~8: Display signal status of current EVT
- 10) ERROR: Fault signal
- 11) LIGHT: Light signal
- 12) PTEND: Program end signal
- 13) DARIN: Darin signal
- 14) REF1~REF2: Signal status of path 2 compressor

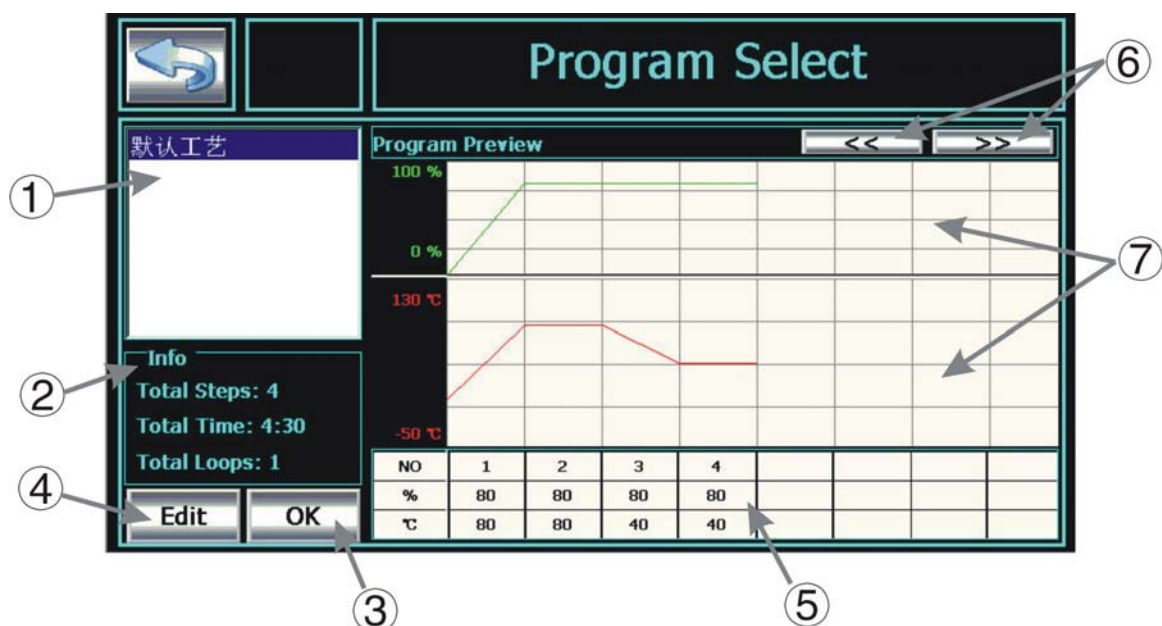

Number	Name	Description
①	Process name	Display available process names and connection
②	Info	Display total steps, time and cycle times of selected processes
③	OK button	Click OK button to confirm process alternation
④	Edit button	Click edit button to enter process setup and connection
⑤	Step SV display	Display temperature, humidity fixed-value of each step
⑥	Page turn key	Click the key to check humidity curve of up page and down page
⑦	Curve preview	Red displays temperature, green displays humidity

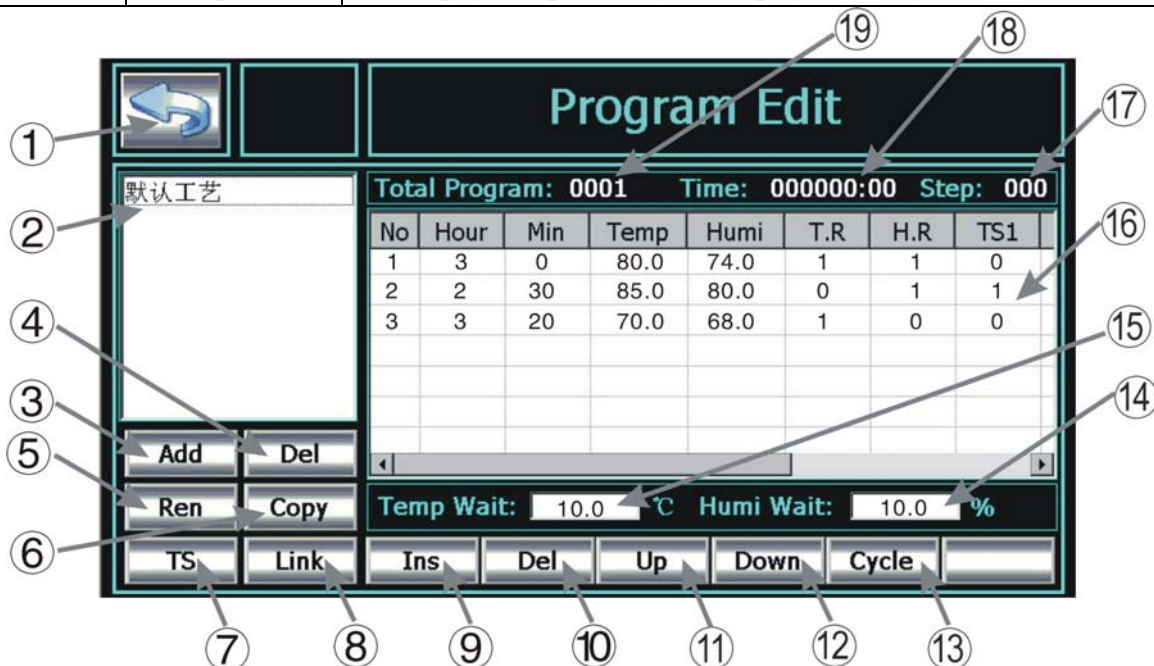

Item	Name	Description
①	Return key	Return to process setup interface
②	Process name	Display a list of all processes
③	Add key	Click it to add new process
④	Delete key	Click it to delete selected process
⑤	Name change key	Click it to change the name of selected process.
⑥	Copy key	Click it to copy selected process.
⑦	TS key	Click it to open TS signal collocation area
⑧	Connection key	Click to connect process
⑨	Step insert key	Click it to insert step program
⑩	Step delete key	Click it to delete step program
⑪	Step up key	Click it to turn to up stage
⑫	Step down key	Click it to turn to down stage
⑬	Step cycle key	Click it to set step program cycle
⑭	Humidity waiting	Display humidity waiting value
⑮	Temperature waiting	Display temperature waiting value
⑯	Process setup	Process value setting area
⑰	Total steps	Display total steps for setup
⑱	Time display	Display total time of setup steps
⑲	Process number	Display set total process number

## Program Edit

默认工艺

Add

Del

Ren

Copy

TS

Link

Total Program: 0001
Time: 000000:00
Step: 000

No	Hour	Min	Temp	Humi	T.R	H.R	TS1

Type1

Type2

Type3

Type4

Type5

Type6

On Time	0	0	0	0	0	0	0
Off Time	0	0	0	0	0	0	0

TS signal collocation, which has 6 types:

ON-Time indicates the time from startup to the time to turn on TS signal, and OFF-Time indicates the continuous input time of TS signal point. If both ON-Time and OFF-Time are set as 0, it means the TS signal of this type is continuously exported in a certain step till the end. The setting unit of ON-Time and OFF-Time is minute, and the largest is 600 minutes.

TS signal setting example:

If the set time of a step is 5 minutes and TS1 signal and type 1 are set, then

1. If ON-Time of TS type 1 is 1 minute and OFF-Time is 2 minutes, then when the step is operated, TS1 signal will be turned on after 1 minute, and turned off after 2 minutes' continuous output.
2. If ON-Time of TS type 1 is 2 minutes and OFF-Time is 4 minutes, then when the step is operated, TS1 signal will be turned on after 2 minutes, and turned off after 3 minutes' continuous output.
3. If ON-Time of TS type 1 is 6 minutes and OFF-Time is 2 minutes, then when the step is operated, TS1 signal will not be turned on.
4. If ON-Time of TS type 1 is 1 minute and OFF-Time is 0 minute, then when the step is operated, TS1 signal will be turned on after 1 minute, and turned off after four minutes' continuous output.

## Program Edit

Total Cycle: 1

S: 0

E: 0

C: 0

S: 0

E: 0

C: 0

S: 0

E: 0

C: 0

S: 0

E: 0

C: 0

S: 0

E: 0

C: 0

S: 0

E: 0

C: 0

Total Program: 0001
Time: 000004:30
Step: 004

No	Hour	Min	Temp	Humi	T.R	H.R	TS1
1	1	0	80.0	80.0	1	1	0
2	2	0	80.0	80.0	1	1	0
3	0	30	40.0	80.0	1	1	0
4	1	0	40.0	80.0	1	1	0

Temp Wait: 0.0 °C

Humi Wait: 0.0 %

Ins

Del

Up

Down

Cycle

Item	Name	Description
①	Total cycle times	Set the large cycles
②	Small cycle setup	Set the small cycles

Note: the setup of small cycles should be arranged from left to right, from up to down, and executed according to the items. The largest cycle times can be set 999 times.

Tips for small cycle setup:

- (1) Start, end bugle cannot exceed current largest bugle of the process.
- (2) Start bugle should be smaller than end bugle.
- (3) If the end bugle is not 0, the start bugle cannot be 0 either.
- (4) If the small cycle is not used, please set the start and end bugles to 0.
- (5) If you use the small cycle, namely, the start and end bugles are not 0, the smallest set time should be 1.

For example:

1. If the small cycle is set as follows:

Small cycle (1): start: 2, end: 3, cycle: 2

Small cycle (2): start: 1, end: 4, cycle: 2

Small cycle execution effect: 1 2 3 2 3 1 2 3 4 1 2 3 4.....

2. If the small cycle is set as follows:

Small cycle (1): start: 1, end: 4, cycle: 2

Small cycle (2): start: 2, end: 3, cycle: 2

Small cycle execution effect: 1 2 3 4 1 2 3 4 2 3 2 3 .....

3. If the small cycle is set as follows:

Small cycle (1): start: 1, end: 3, cycle: 2

Small cycle (2): start: 2, end: 6, cycle: 2


Small cycle execution effect: 1 2 3 1 2 3 2 3 4 5 6 2 3 4 5 6 .....

4. If the small cycle is set as follows:

Small cycle (1): start: 1, end: 2, cycle: 2

Small cycle (2): start: 4, end: 5, cycle: 2

Small cycle execution effect: 1 2 1 2 3 4 5 4 5 .....

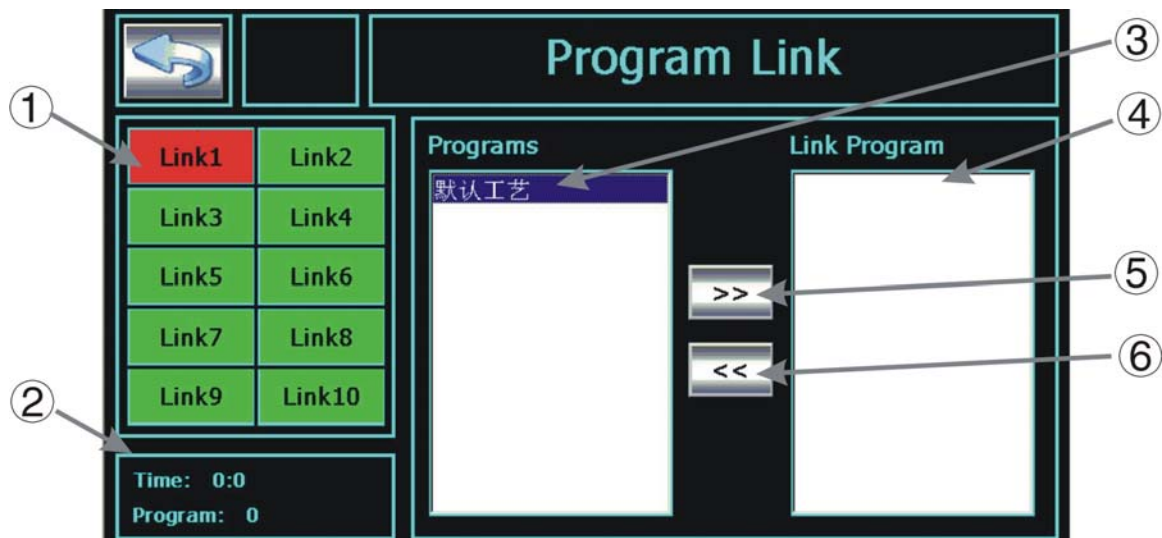


Item	Name	Description
①	Connection No.	Display connection. The controller preset 10 connection, connection 1-10
②	Connection information	Display the total time of selected connection process (cycle not included) and the quantity of process in connection
③	Current process list	Display currently all edited processes
④	Connection process list	Display all processes of selected connection, 10 processes at most can be connected
⑤	Connection process add	Add selected processes to connection process list
⑥	Connection process delete	Delete selected connection process


#### 4. Fixed-value Control

Clicking “Fixed-value control” in mode selection window will lead to fixed-value main control window, in which users can carry out relevant operation of fixed-value control and check corresponding status information of the system.

Corresponding display of different statuses of fixed-value main control interface:

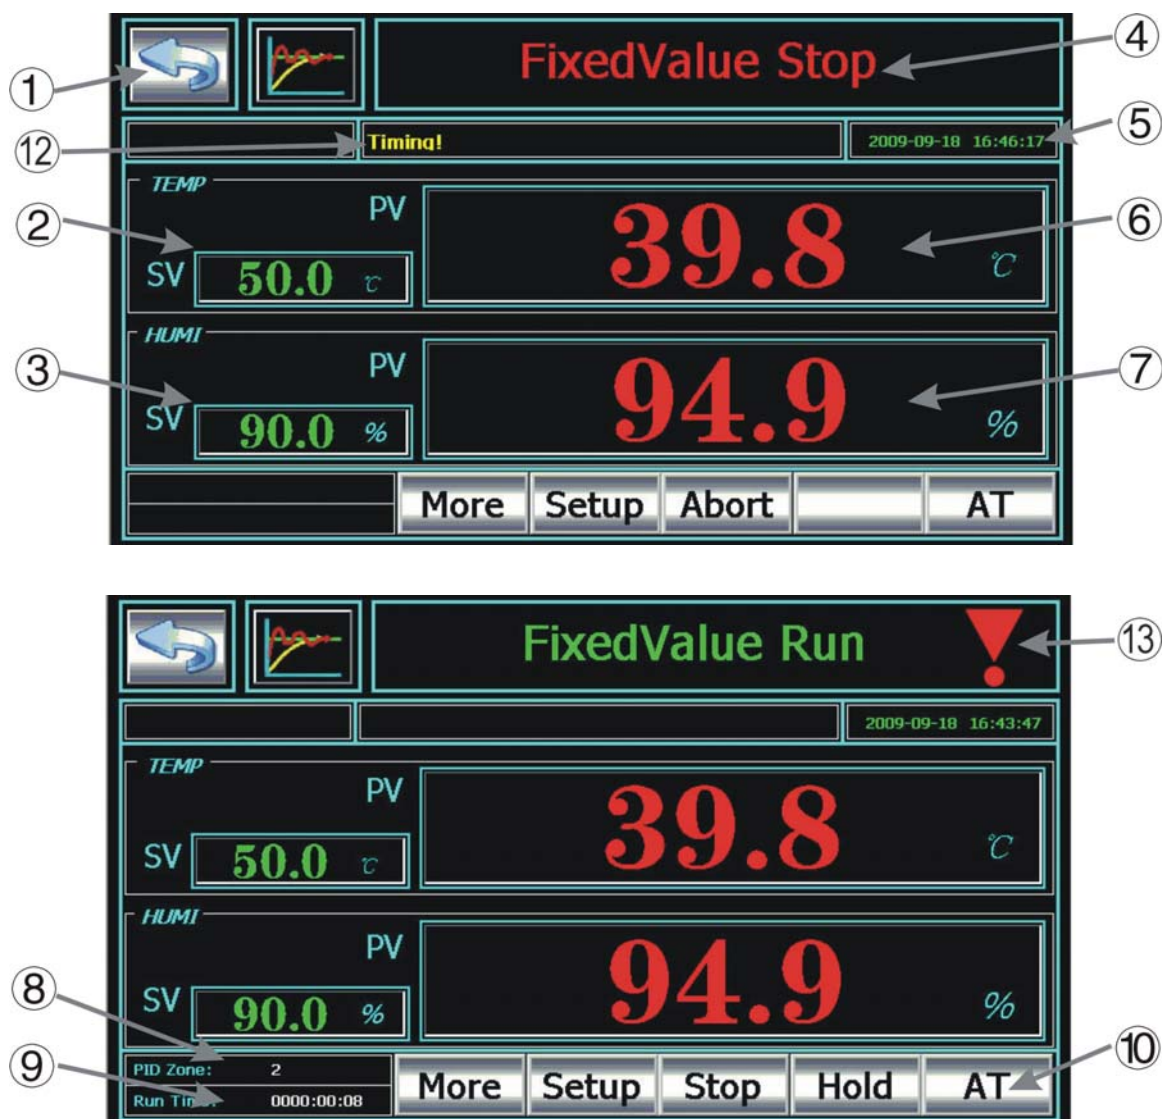



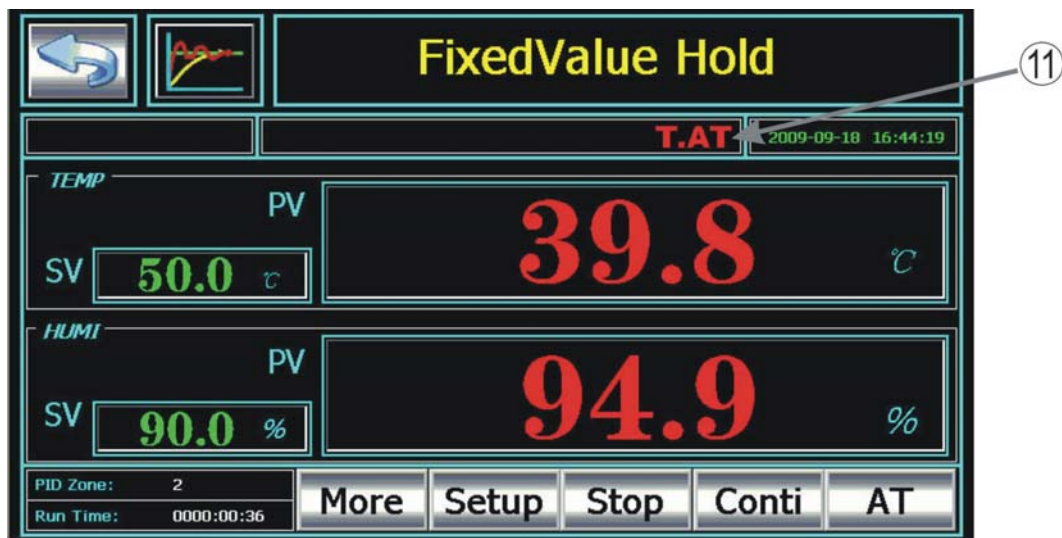

Item	Name	Description
①	Return button	Click it to return up interface
②	Temperature SV value	Display current temperature fixed-value
③	Humidity SV value	Display current humidity fixed-value
④	Operation status	Display operation status of current fixed-value
⑤	System time	Display current system time
⑥	Temperature PV value	Display measured value of current temperature
⑦	Humidity PV value	Display measured value of current humidity
⑧	Current PID area	Display PID area of current operating fixed-value
⑨	Fixed-value operation time	Display already operated time of current operating fixed-value
⑩	Self tuning function key	Go to self tuning operation interface
⑪	Self tuning indication	Display self tuning status
⑫	Reservation indication	Display during waiting time of system reservation boot
⑬	Alarm indication	Display with a flash during the system fault alarm. Click it to check more

Introduction to operation function of main control interface of fixed-value control:

- 1) Operation: Start fixed-value operation.
- 2) Stop: End fixed-value operation
- 3) Maintain: Pause slope and timing status
- 4) Continue: Related to keep operation, recover slope operation and timing
- 5) Cancel: Related to setup of reservation operation and canceling reservation operation
- 6) Detail: Enter detailed interface of fixed-value control
- 7) Setting: Enter parameter setup interface of fixed-value control
- 8) AT: Enter self tuning interface

Detailed interface of fixed-value control information:


Clicking “detail” key in fixed-value main control interface will lead to detailed interface of fixed-value control information, in which users can check relevant information of the system in detail. It is very helpful for observing the working condition of the system.

Interface of setting parameter of fixed-value control:



Clicking “setting” in fixed-value main control interface will lead to the interface of setting parameter of fixed-value control, in which users can set relevant parameters of fixed-value operation of corresponding system.

Clicking A and B area successively in the detailed fixed-value interface. The customer login window will appear. Select customer, and confirm password, then directly enter “input correction” interface.

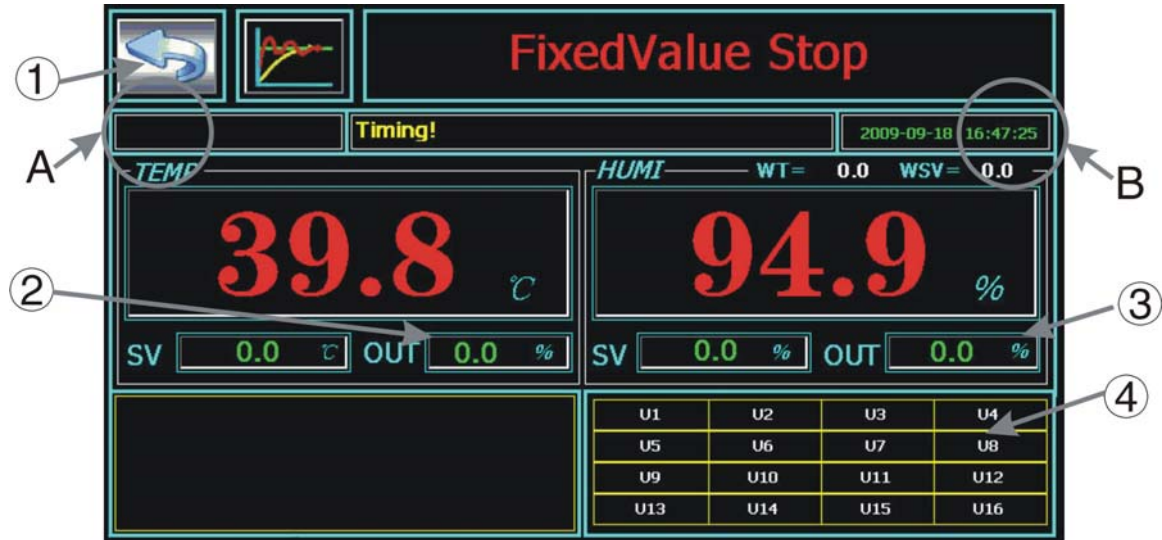

Item	Name	Description
①	Return	Click to return to fixed-value main control interface
②	Temperature OUT %	Current temperature output percent
③	Humidity OUT %	Current humidity output percent
④	DCU output point name	Click to go to information quantity interface

Signal							
TS1	TS2	TS3	TS4	TS5	TS6	T.R	H.R
TA1	HA1	IS1	IS5	OS1	OS5	T.U	H.U
TA2	HA2	IS2	IS6	OS2	OS6	T.D	H.D
TA3	HA3	IS3	IS7	OS3	OS7	T.S	H.S
TA4	HA4	IS4	IS8	OS4	OS8	REF1	REF2
EVT1	EVT2	EVT3	EVT4	EVT5	EVT6	EVT7	EVT8
ERROR	LIGHT	PTEND	DRAIN				



Item	Name	Description
①	Temperature setup	Set temperature target SV value
②	Humidity setup	Set humidity target SV value
③	Temperature slope	Select temperature slope status on or off
④	Humidity slope	Select humidity slope status on or off
⑤	Operation time	Select operation time status on or off
⑥	Temperature slope value	Set temperature slope value
⑦	Humidity slope value	Set humidity slope value
⑧	Operation time value	Set fixed operation time
⑨	Temperature slope confirmation	Fixed-value operating. It will work after setting temperature slope value and Clicking OK key
⑩	Humidity slope confirmation	Fixed-value operating. It will work after setting humidity slope value and Clicking OK key

Tips for fixed-value setting operation:

1. During the fixed-value operation with no set slope, you can go to setting interface to set slope. Restore fixed-value operation time and time it again after slope impletion completes.
2. During the fixed-value operation with set slope, you can revise the slope during the operation if you are not satisfied with it. And the program will execute the new slope according to current measured value.

For example:

Temperature PV1: 40°C temperature TSV: 70°C, humidity PV1: 60% humidity TSV: 90%, temperature slope 1: 5°C/minute, humidity slope 1: 5%/minute, after the fixed value operates for two minutes, if you change the temperature slope to: temperature PV2: 50°C temperature SV: 50°C, humidity PV2: 70% humidity SV: 70%, temperature slope 2: 10°C/minute, humidity slope 2: 10%/minute, the slope operation will continue to execute new slope in “temperature PV2: 50°C” status.

3. After the slope of fixed-value operation is finished, if you change the fixed value and slope, the program will execute new slope based on current new measured value.

For example:

Temperature PV1: 40°C temperature SV1: 60°C, humidity PV1: 40% humidity SV1: 60%, temperature slope 1: 5°C/minute, humidity slope 1: 5%/minute, after the slope operates for 4 minutes,

the slope operation will be turned off. Meanwhile, new fixed value and slope will be adjusted, namely, temperature PV2: 60℃ temperature SV2: 80℃, humidity PV2: 60% humidity SV2: 80%, temperature slope 2: 10℃/minute, humidity slope 2: 10%/minute, and then the slope operation will execute new slope in “temperature PV2: 60℃, humidity PV2: 60%” status.

Detailed fixed-value operation parameters are as follows:

#### 1) Temperature setting:

It corresponds with fixed value of humidity goal of fixed-value operation, and temperature set range is -150~350℃, humidity set range is 0~100%. It supports revision during operation. However, if the system is in the slope process when you revise, the slope will restart from current measured value after revision.

#### 2) Humidity slope:

If you select to set humidity slope status, OFF means no slope use and ON means to use it. The current status will be specially shown in blue color. If you use the slope, you need to set relevant slope, the humidity setting range 0.1~100℃/Min.

#### 3) Slope switch difference:



If slope operation is on, SV will gradually rise to target fixed value according to the set slope.

For example:

Temperature slope being on, the relevant slope value is set as 20℃ while the target fixed value is 80℃, and current temperature is 40℃. Since current measured value and target fixed value differs in  $80-40=40℃$ , it needs 2 minutes to go up by 40℃ in the slope of 20℃/Min.

SV curve shown as the chart:

If the slope is not on, SV curve will be shown as this chart:

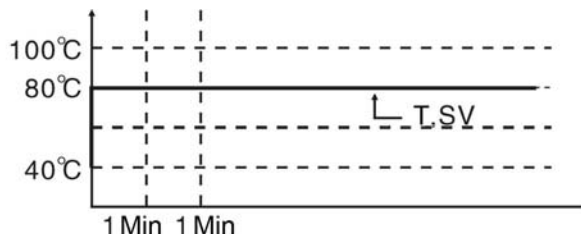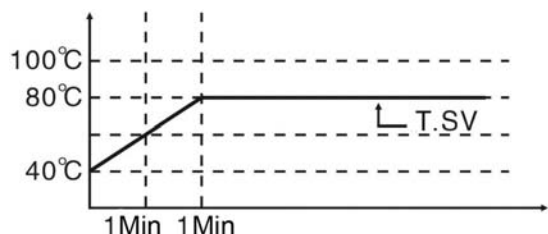


#### 3) Fixed operation time:

If you select to set fixed time status, OFF means nonuse and ON means to use it. The current status will be specially shown in blue color. If you use it, it is necessary to set relevant operating time length, and the range is 1-60000 minutes. After the function is turned on, when the operated time adds up to the set time length, the system will automatically end the fixed-value operation. Contrarily, if the operation time is “OFF”, the fixed-value operation will never stop without manual operation.

Fixed operation time setting supports modification during the operation.

#### ! Attention

- ◆ When you start slope and operation time function at the same time, the operation time will start to be calculated after slope completion.

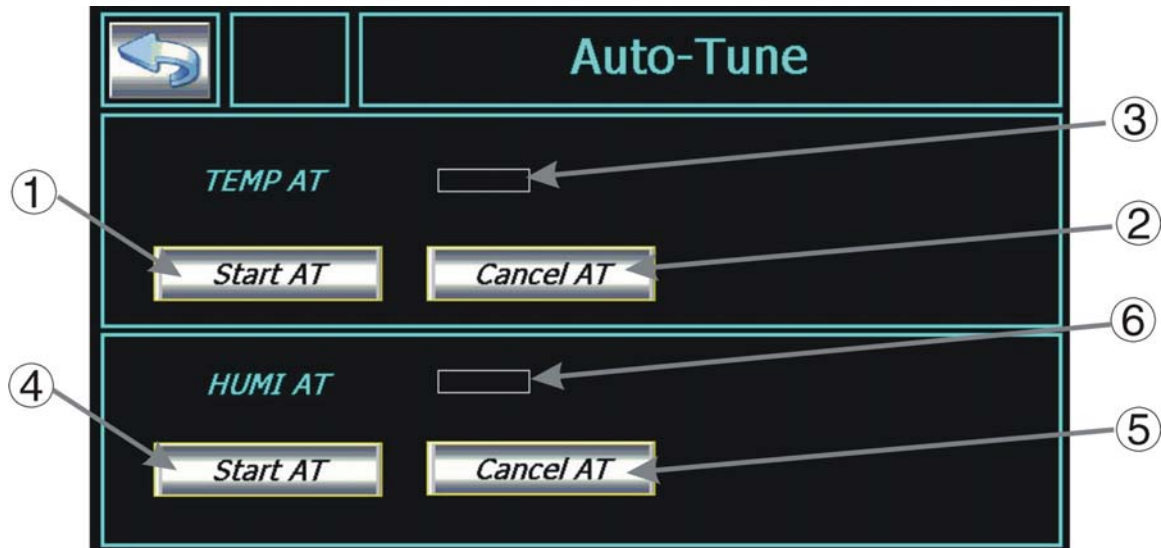

Item	Name	Description
①	Select temperature self-tuning	Click it to operate temperature self tuning
②	Cancel temperature self-tuning	Click it to cancel temperature self tuning
③	Temperature self-tuning status	Red means the temperature is self tuning, and black means the temperature is not self tuning.
④	Select humidity self-tuning	Click it to operate humidity self tuning
⑤	Cancel humidity self-tuning	Click it to cancel humidity self tuning
⑥	Humidity self-tuning status	Red means the humidity self tuning, and black means the humidity is not self tuning.

Temperature self tuning interface:


Click “AT” key in fixed-value main control interface to enter humidity self tuning interface Users are free to choose self tuning on or off.


Self tuning can only be carried out in starting up status of fixed-value operation. After the start of self tuning, fixed-value operation will automatically enter maintaining status, and the upper right will show red “TAT”. After self tuning completes, the system will automatically end maintaining status and enter operation status. Relevant PID parameters after self tuning will be automatically recorded in the PID area of the system when self tuning starts. Self tuning function is mainly used in equipment adjustment stage. It is recommended that advanced users’ authority should be set on it after the completion, in order to avoid loss of PID parameters due to wrong operation. If you set users’ access privilege to “AT”, Click the button and a logging in window will pop up. You can have access to temperature self tuning interface only after choosing users’ grade meeting authority’s requirement and inputting right password.



Operation status	Reminding content
Select self tuning in standby status	“The system is not operated!”
Click “continue” or “stop” during the tuning	“The system is self tuning!”

## 5. Real-time Curve

In program control interface or fixed-value control interface, clicking  icon will lead to real-time curve interface.

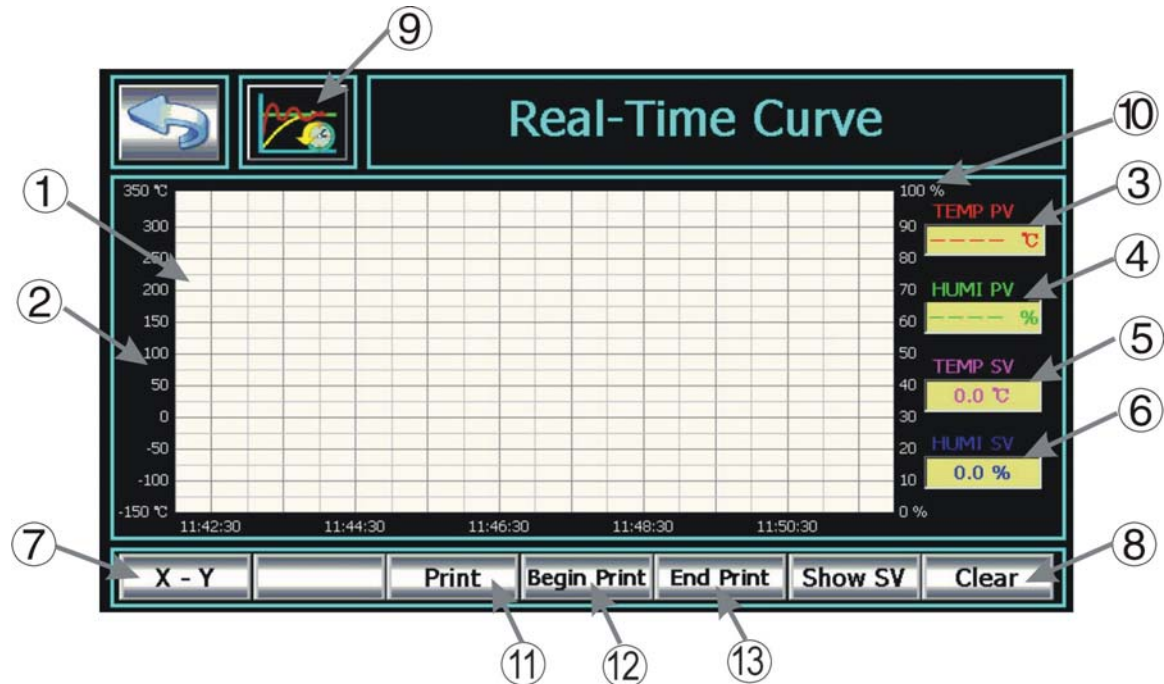

Item	Name	Description
①	Curve display area	Real-time curve is displayed in this area
②	Temperature coordinate display	Display temperature coordinate value
③	Temperature PV value	Display current temperature real measured value
④	Humidity PV value	Display current humidity real measured value
⑤	Temperature SV value	Display temperature fixed value
⑥	Humidity SV value	Display humidity fixed value
⑦	Coordinate revision	Click it to set temperature coordinate
⑧	Curve cleaning key	Click it to clean real-time curve in the area and draw it again
⑨	History curve	Click it to go to history curve interface
⑩	Humidity coordinate display	Display humidity coordinate value
⑪	Manual printing*	Manually drive micro printer
⑫	Printing start*	Automatically cycle printing start
⑬	Printing end*	Automatically cycle printing stop

Note: Keys with \* can be shown only when choosing to use the mini printer.

Use mini printer:

If you choose to use mini printer, the below of interface will appear buttons “manual printing”, “Printing start” and “printing end”.

1. Click “manual printing”: each click the button will print current time and humidity measured value once.


2. Click “printing start”: after the click, it will print the current time and humidity value once every other minute.

3. Click “printing end”: the click will end fixed-time printing.

The interface will meet users' needs to browse the curve of real-time data. Continuous real-time record of the curve changes of the humidity in recent time will help users observe the changes of humidity, analyze the trend of the curve changes and find out the data change rule, so as to prevent accidents. In the curve display area, humidity PV curve will be shown in red line, temperature SV curve will be shown in blue line, humidity PV curve will be shown in green line, temperature SV curve will be shown in dark yellow line.

Real-time curve interface includes the following items:


- 1) Coordinate setup: Click the button and the coordinate setup dialog box will pop up. Change the size of curve display area by changing the length of coordinate axis, which will help users observe the curve well. In this window, users can set history curve's maximum value "Y max" and minimum value "Ymin" of Y axis as well as the time length of X axis. The setup will be done after clicking "revision complete" button. The time setting range is 10~90 minutes.
- 2) Clean and redraw it: Clicking the button will clean the displayed curve in curve display area. The curve will be redrawn from current moment.
- 3) SV display: Clicking the button will shift display and concealing of humidity SV real-time curve in curve display area.

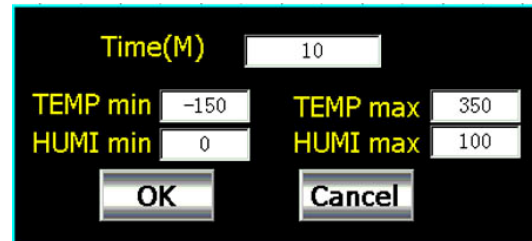


#### ! Attention

When you set, "Ymin" is not allowed to exceed "Ymax".

## 6. History Curve

In real-time curve interface, clicking  icon will go to history curve interface. Clicking return key will return to real-time curve.

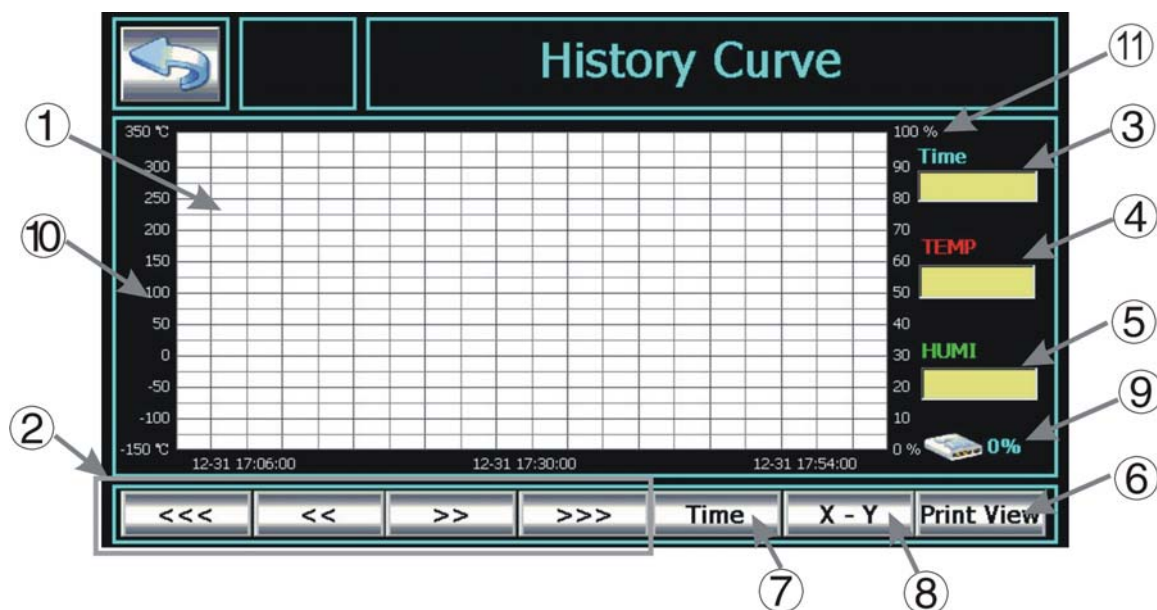



Item	Name	Description
①	Curve display area	History curve displays in this area
②	FWD and REV button	Click it to realize forward and backward function
③	Current point time	Display the time of currently chosen historical point
④	Current point temperature value	Display the temperature value of currently chosen historical point
⑤	Current point humidity value	Display the humidity value of currently chosen historical point
⑥	Print preview button	Click it to go to print window
⑦	Curve inquiry button	Click it to set the start time of historical data
⑧	Coordinate revision button	Click it to set coordinate and time of humidity
⑨	Used storage space	Display currently used storage space proportion
⑩	Temperature coordinate display	Display temperature coordinate value
⑪	Humidity coordinate display	Display humidity coordinate value

This interface can help users to have an overview of the historical data curve, helping them to check the historical data of equipment operation in the past. UMC1200 has the function of storing historical data, which will not disappear in case of power failure. When the system is in operation, it is able to make trend effect drawing of corresponding historical data according to requirements, which makes it easier to check data and variation trend status later on.

History curve interface includes the following items:

1) Cursor: Cursor, a line in curve area, moves with the mouse's move. In the information display window on the right, it shows the time the cursor directs and temperature value at the moment.

2) Operation button: Operation button includes basic operation of historical trend curve.

<<<: One page up

>>>: One page down

<<: One main line time up, curve display up by a small margin

>>: One main line time down, curve display down by a small margin


3) Curve inquiry: Click the button and curve inquiry dialog box will pop up.

As shown in the image, while setting curve inquiry, users can input the start time of the data to be observed according to your needs. You can choose from the following items:

1) Saved data in recent X hours: by setting the time length, you can get the curve in recent certain period, usually one hour.

2) Set start time: Save the data at set time by setting start time of X axis. Users can skip to required time by using this option. The set time should not be later than current time.

Note: if the start time is set too early, the controller's speed may be affected because too much historical data many lead to long data loading time. So if users need to inquire historical data and curve in earlier period, it is suggested that you use

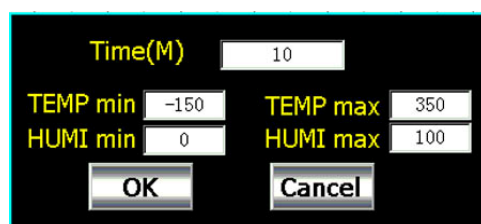

UMC1000 (User) upper software to operate.

- 3) Coordinate setting: Click the button and coordinate setting dialog box will pop up. Changing the size of curve display area by changing the length of coordinate axis will help users observe the curve well. In this window, users can set maximum "Ymax" and minimum "Ymin" of Y axis of History curve as well as time length of X axis. The setting will be completed after pressing "revision complete" button. The time setting range is 1~10 hours, and "Ymin" cannot be larger than "Ymax".
- 4) Clicking "print preview" button of History curve interface will lead to printing interface



Item	Name	Description
①	Return (invisible key)	Press this area to return to History curve interface
②	Print (invisible key)	Press this area to print the curve
③	Print information	Display curve print information
④	Operator	Input operator name
⑤	Remarks	Input relevant remark information

### III. Advanced

After clicking advanced operation button in function selection interface, you will enter advanced operation function selection interface. Advanced operation includes advanced renewal, historical dump, document backup, manual debugging and fault record.



Item	Name	Description
①	Historical dump	Dump historical data of required temperature
②	Manual debugging	Manually debug input and output signals and analog output signals
③	Document backup	Make a document backup copy of interior parameters and process connection setup of the system
④	Fault record	Record of historical faults
⑤	Advanced renewal	Insert a U disk with renewed document. Click this key to go to advanced renewal interface. Restart the system after confirmation and the system will enter renewed version.

## 1. Historical Dump

In order to help users to dump the historical data of the humidity in required time scope, UMC1200 system collocates a historical data storage function with the longest time of 600 days(24 hours operation status/ record interval : one minute). Users can check the historical data of last 600 days through historical data playback function. After exceeding 600 days, the earliest data will be automatically cleaned by the system, so as to always maintain the recent historical data of 600 days.

In order to avoid data loss, users can dump earlier historical data from UMC1200 through removable storage equipment such as U disk and portable hard disk. Besides, you can also use relevant upper data playback software to transfer the data to general use data-base format (ACCESS) and save it to the computer, so as to store the data permanently.



Item	Name	Description
①	Export button	Confirm the start of historical data export
②	Start time	Set the start time of exporting historical data
③	End time	Set the end time of exporting historical data
④	USB status	Display the USB device connecting status of current system

After entering historical dump interface, if the system can identify the portable storage equipment, the setting area of start time and end time will automatically show. After setting the start time and end time of historical data in required time scope, the system will automatically enter historical data dump process as long as you click “export” key. During the dump process, a progress bar will appear in the interface to display the dump progress. After the data dump completes, an information box will pop up to remind you “export complete!” A new file named by the exported time will be added to the root directory of the USB device, and it includes the historical data document with the postfix name of \*.h12.

! Attention	
◆	As the historical data documents of the system increases, the data dump time will become relatively longer. A progress bar will display current dump progress after the start of dump process. Please be patient waiting until the relevant information box pops up.

Dump start/end time setting scope:

Year	Month	Day	Hour	Minute
2000~2035	1~12	1~31	0~23	0~59

Other possible reminders which may appear during the operation:


Operation status	Reminding content
After going into historical dump interface, if the USB device is not inserted or identified by the system	Please insert portable storage equipment and operate again!
Choose to click export operation while the USB device is not inserted or identified by the system	Please insert portable storage equipment and operate again!
End time is later than system time	End time is later than current system time!
End time is earlier than start time	Start time cannot be later than end time!
Export operation fails	Invalid target path!
	Document cannot be created in target path(an operation which is only executed without USB device/read-only)
	No historical data document!
	Something wrong with creating document in target path!
	No data document suitable for the time scope(no data in the start and end time scope)

Historical data of USB dump cannot be opened in upper computer. You need to use UMC1000\_User software to transform the format and playback. After transformation, the document format will be changed to \*.his12.

Users can transform it to ACCESS data-base document based on different needs.

## 2. Document Backup

System parameters and process connecting document backup function will help users to backup and resume set parameters and process. Document operation includes parameter backup and process backup.

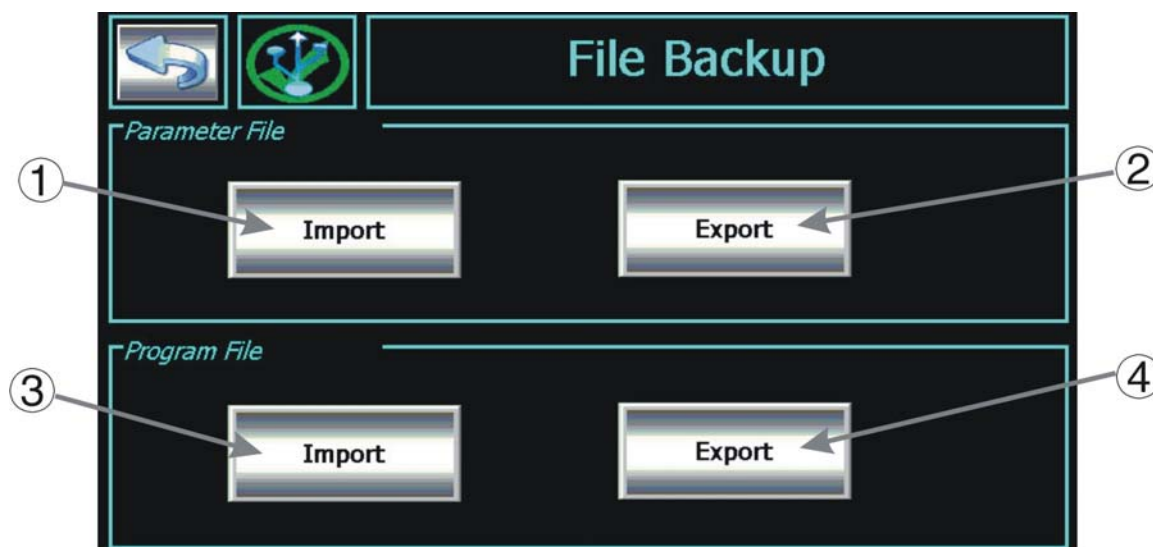



Item	Name	Description
①	Parameter import	Confirm to start parameter document import process
②	Parameter export	Confirm to start parameter document export process
③	Process import	Confirm to start process document import process
④	Process export	Confirm to start process export process

Document backup can help users to backup and dump useful parameter documents. After the system identifies the portable storage equipment, you can choose to execute “export” or “import” operation.

At any time users can execute relevant operation to UMC1200 through portable storage equipment such as U disk, portable hard disk, dumping the system parameters to portable storage equipment in document format and save them to the computer, so as to realize parameters backup. Besides, it is also possible to set up relevant documents in UMC1200 through importing operation.

Export: display “export completes” on success and “export fails” on failure.

Import: display “import completes” on success and “import fails” on failure.

After dump completes, a “Paramdata.d12” document will be added to USB device root directory, namely the parameter document. When there are many process or parameter documents under the root directory of U disk, a selection list will pop up before importing.

Other possible reminders which may appear during the operation:

Operation status	Reminding content
After going into data operation interface, if USB device is not inserted or identified by the system	“Please insert portable storage equipment and operate again!”
Choose to click export or import operation while the USB device is not inserted or identified by the system	“Please insert portable storage equipment and operate again!”

Process backup: Process backup can help users to backup and dump useful process and connecting documents. After the system identifies portable storage equipment, you can choose to execute “export” or “import” operation. At any time users can execute relevant operation to UMC1200 through portable storage equipment such as U-disk, portable hard disk, dumping the system parameters to portable storage equipment in document format and save them to the computer, so as to realize parameters backup. Besides, it is also possible to set up relevant documents in UMC1200 through importing operation.

Export: display “export completes” on success and “export fails” on failure.

Import: display “import completes” on success and “import fails” on failure.

After the dump completes, a “Program.p12” document will be added under the root directory of USB device, the process setting document.




Other possible reminders which may appear during the operation:

Operation status	Reminding content
After going into data operation interface, if USB device is not inserted or identified by the system	“Please insert portable storage equipment and operate again!”
Choose to click export or import operation while the USB device is not inserted or identified by the system	“Please insert portable storage equipment and operate again!”

### 3. Manual Debugging

While debugging the equipment before using it, manually debugging switch output signals, input signals and analog output of the system is very helpful for users to know whether current system output and input signals are correct or the power distribution of the equipment is reasonable.



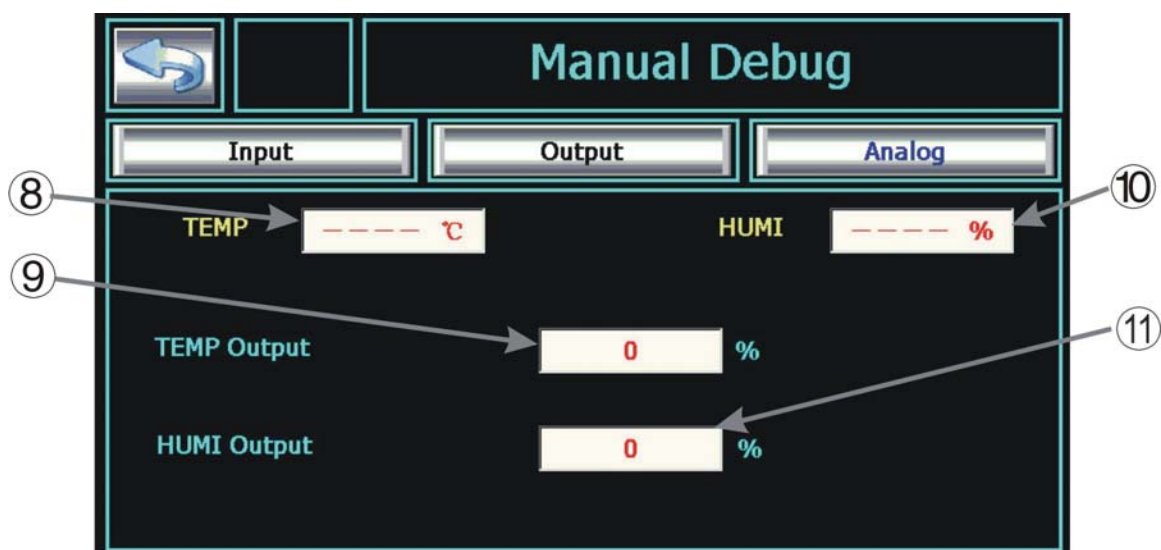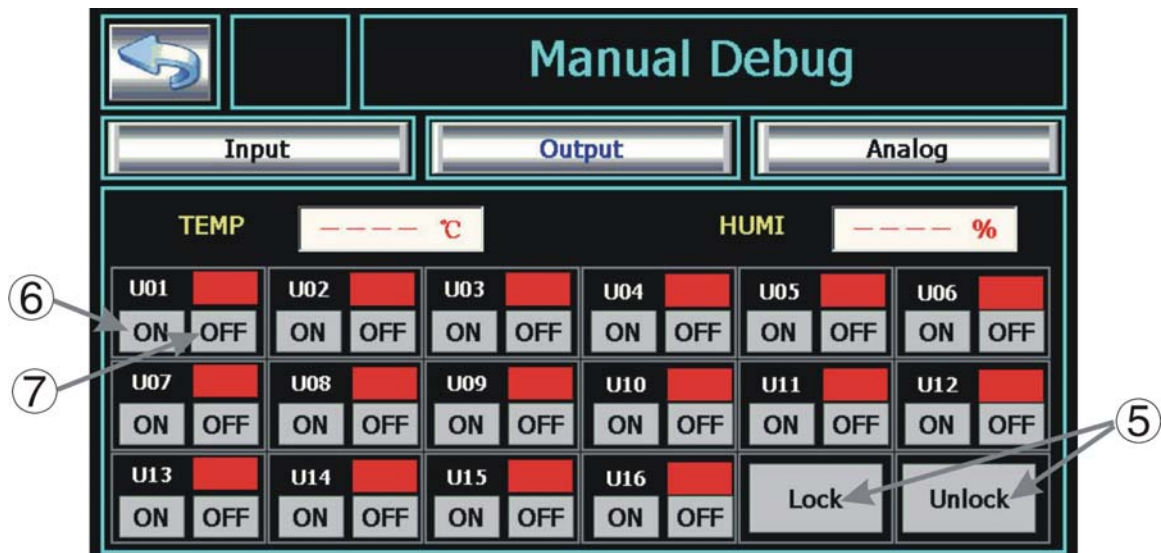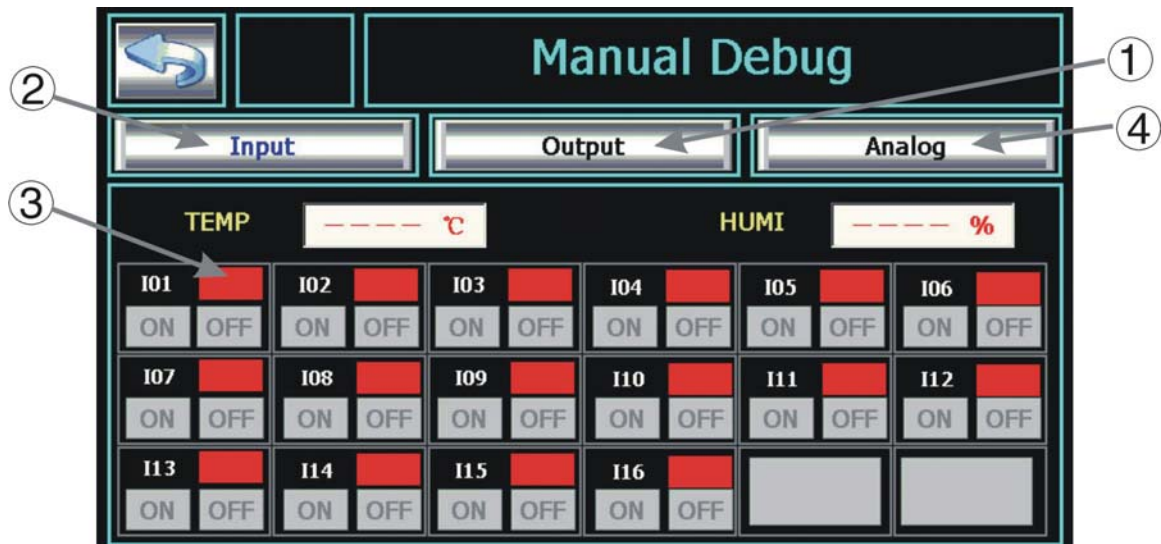

Item	Name	Description
①	Switch output	Click it to enter switch output debugging status
②	Switch input	Click it to enter switch input debugging status

③	Input indicator	16 input indicators, green means input satisfaction
④	Analog output	Click it to enter analog output debugging status
⑤	Locked/ unlocked	Click it to lock/unlock
⑥	ON key	Force current point output
⑦	OFF key	Force current point to turn off
⑧	Current temperature	Current temperate PV value
⑨	Temperature output%	Manually set temperature output power, 0~100%
⑩	Current humidity	Current humidity PV value
⑪	Humidity output%	Manually set humidity output power, 0~100%

After choosing to click “manual debugging”, you will enter manual input operation interface, in which you can debug input signal manually or choose “switch output part” and “analog output part” to shift to switch output signal manual debugging interface or analog output signal manual debugging interface.

Besides switch status display, in manual debugging interface there is also current temperature display of the system, which will help users to know more about current system's condition.

- 1) Input signals: Use status bar reflects corresponding status of current switch input signals. When there is no signal input, the signal indicator is red, and when there is signal input, the indicator is green.
- 2) Output signals: In order to avoid wrong operation, “lock” and “unlock” function keys (the system default as locked) are added in manual output interface and manual output operation can be executed only in “unlocked” status. ON/OFF operations correspond with their output signal switches, ON means to force current point to export, and OFF means to force current point to turn off. The applied value reflects corresponding status of current switch input signals. No point output is shown as red and point output value is displayed as green 1.
- 3) Analog output signals: Users can set corresponding output percent in temperature output percent, and manually debug the heater. For example, set it to be 30%, heater's power 1000W, and then the output will be 300W.

<b>! Attention</b>	<b>Wrong operation may hurt users or damage stuff.</b>
◆	In manual debugging interface 101~I16 corresponds with DCU1000 module's input point 101~I16, U01~U16 corresponds with DCU1000 module's input point U01~U16. Temperature output percentage corresponds with ACU1000 module's OUT1 output status, humidity output percentage corresponds with ACU1000 module's OUT2 output status.

#### 4. Fault Record

Click “fault record” key in advanced operation interface and the system will enter historical alarm record interface, in which users can check recent fault matters. Pressing clear key can clear all fault records.

Displayed fault information includes the following content:

Happening time: the happening time of the alarm accident;

Releasing time: the releasing time of the alarm accident;

Fault accident: fault name generating alarm

Fault act: the fault means that the alarm happens/ releasing means that alarm ends

Failure History			
NO	Time	Type	Event
1	2009-09-18 15:21:37	Failure	ACU Disconnected
2	2009-09-18 15:21:37	Failure	DCU Disconnected
3	2009-09-18 16:00:16	Failure	ACU Disconnected
4	2009-09-18 16:00:16	Failure	DCU Disconnected
5	2009-09-18 16:05:01	Failure	ACU Disconnected
6	2009-09-18 16:05:01	Failure	DCU Disconnected
7	2009-09-21 08:38:39	Failure	ACU Disconnected
8	2009-09-21 08:38:39	Failure	DCU Disconnected
9	2009-09-21 12:20:51	Failure	ACU Disconnected
10	2009-09-21 12:20:51	Failure	DCU Disconnected

Clearing operation of historical alarm record: Click clear key and return from historical alarm record interface, and the records will be cleared

#### ! Attention

- ◆ Historical alarm window can only record 16 faults of fault setup of corresponding interior window, including module communication fault and temperature sensor disconnection fault.

## IV System Setting

Click the System Setting button on the function selection interface to enter the System Setting function selection interface. System settings include nine sections: system time, pre-set boot, power failure recovery, remote operation, cumulative run time, password change, Screensavers time, IP address (DHCP) and touch calibration.

Note: After setting the parameters in the input boxes, you need to exit the interface to activate all set parameters.

System Settings

System Time

2009

Y

9

M

21

D

Confirm

12

H

40

M

6

S

Timing Run

0

Y

0

M

0

D

0

H

0

M

0


S

Power Restoration

Reset

Hold

Run

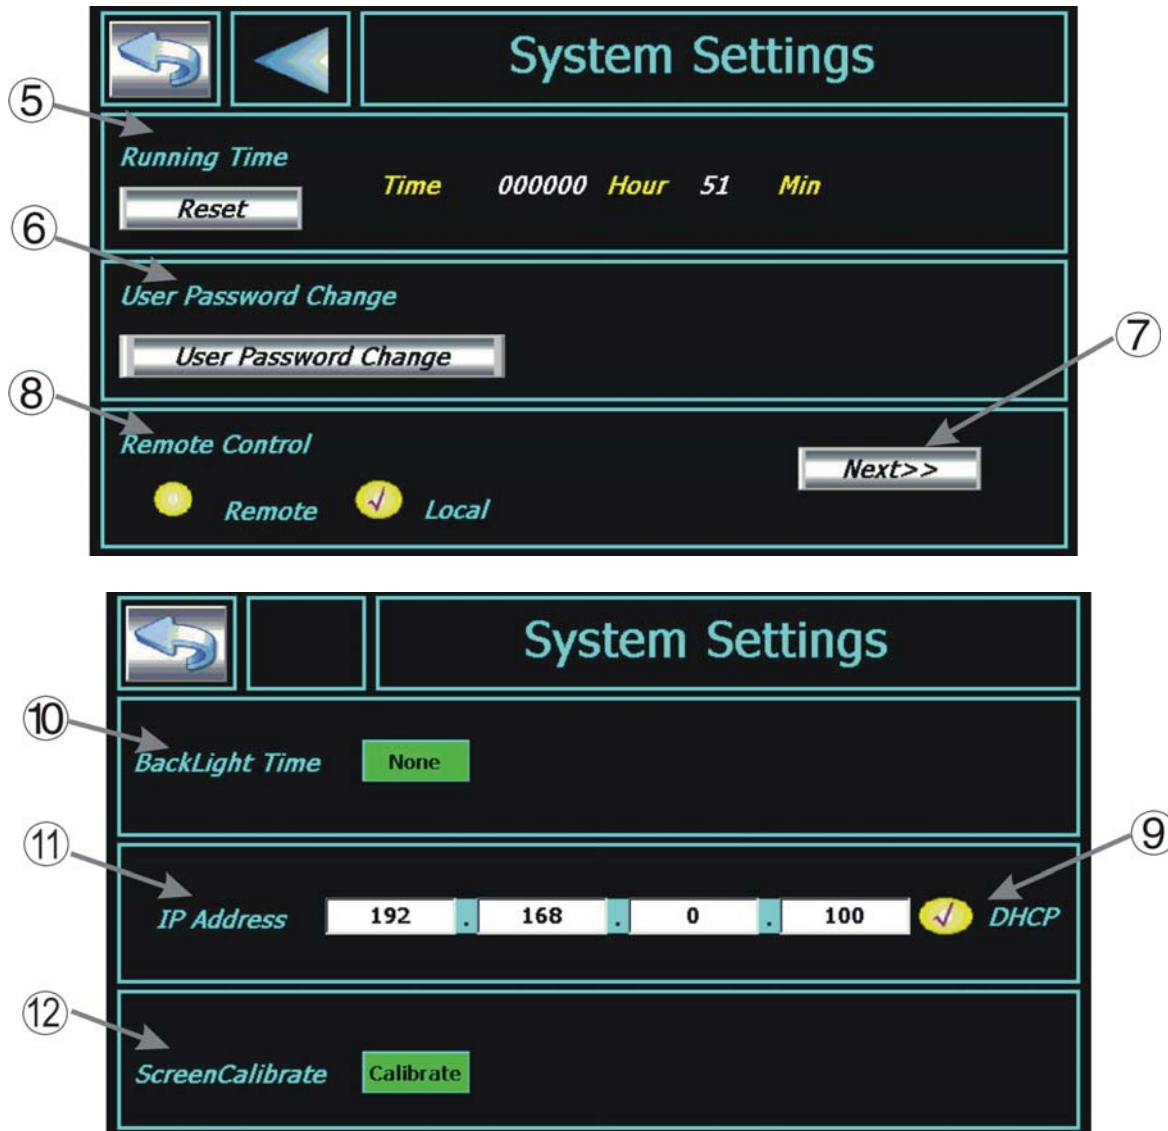

Item	Name	Description
①	System Time	Set up the current system time
②	Pre-set Boot	Set up the pre-set boot status and corresponding time
③	Power Failure Recovery	Select Reset/Cold Boot/Warm Boot
④	Page Up/Down	Switch to system setting 2
⑤	Cumulative Run	Calculation of the total time from the initial use to the current working time
⑥	Password Modification	Modify the password as per the user's requirement
⑦	Next	Enter system setting 3 through the user logon window
⑧	Remote Control	Select remote or local control
⑨	DHCP	Automatically obtain IP address
⑩	Screensaver Time	Select settings of screensaver time
⑪	IP Address	Set up the IP address
⑫	Touch Calibration	Select calibration to calibrate the screen



UNIQUE

User:

Password:

1 2 3 4 5 6 7 8 9 0 <-

A B C D E F G H I J Del

K L M N O P Q R S T Cap


U V W X Y Z OK Cancel

### DHCP Function Tips:

This is the function to automatically obtain IP address and should not be used without connection between the controller and the router. If the controller is not connected with a router, please do not use this function and please manually allocate the IP address.

## 1. Time Setting

This function can amend the current system time. Setting items: year, month, day, hour, minute, second, click “Enter” to finish the amendment. All historical data will be deleted after successful amendment of the system time.



**System Time**

2009 Y 9 M 21 D

Confirm 12 H 40 M 6 S

Scope of system time setting:


Year	Month	Day	Hour	Minute	Second
2000~2030	1~12	1~31	0~23	0~59	0~59

### ! Attention:

All historical data will be deleted if you modify the system time.

## 2. Pre-set Boot


Set the system's pre-set boot status and corresponding pre-set time. When the system time arrives the set time, the system will automatically run.

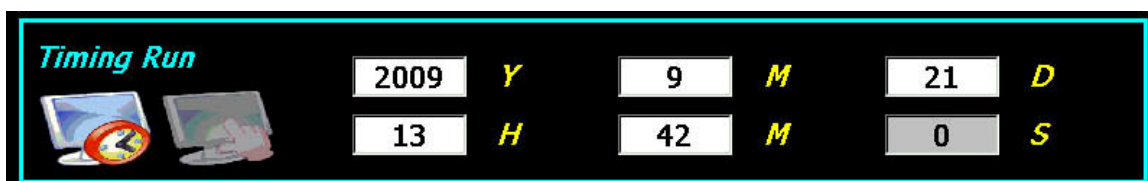

**Timing Run**

2009 Y 9 M 21 D

13 H 42 M 0 S

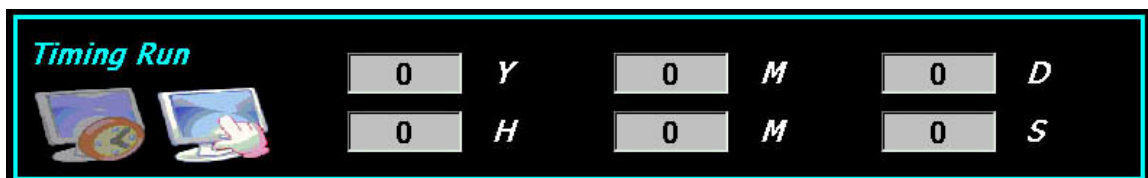

**Timing Run**

0 Y 0 M 0 D

0 H 0 M 0 S

Press the corresponding icon to select the system pre-set boot status. The current status is indicated by the lit icon. When selecting the “Manual Boot”, the corresponding words of “Year, Month, Day, Hour, and Minute” will become pale and the pre-set time cannot be set up. When selecting the “Pre-set Boot”, the corresponding words of “Year, Month, Day, Hour, and Minute” will become white and the “Year, Month, Day, Hour, and Minute” can be set up. The setting scope is the same with the system time.

If the pre-set boot is selected, after the time is satisfied, whether the fixed-value running or

program running is adopted in the automatic boot mode is determined by the last activated control mode of the UMC1200 controller. For example, user A exits the main program control interface and enters the system setting interface to select the pre-set boot and remain at the system function selection interface. When the time condition is satisfied, the system will automatically enter the main control interface of program running to start program running; if user A exits the main program control interface and enters the system setting interface to select the pre-set boot, then enters the fixed-value control interface, when the time condition is satisfied, the system will automatically enter into the main control interface for fixed-value running to start fixed-value running.

After the pre-set boot is selected, there will be the flashing indication of “Timed Run” in the main fixed-value control interface, the main program control interface and their respective interfaces of detailed information, with the “Cancel” button appearing below. You can press the button to cancel the current pre-set boot setting and switch back to the manual boot mode.

#### ! Attention

- ◆ During the switch of the system setting interfaces, if the current system time exceeds the pre-set run time, an information prompt box showing “Start time earlier than the current system time” will pop up, which cannot leave the current window.
- ◆ The self-tuning function has no power failure memory, so the system needs to be rebooted manually.
- ◆ Users are advised not to power off the running system. Because during the running of the system, saving historical data is to perform write operation of FLASH, power failure may damage the system. It is strongly recommended to stop the running system before power off.

### 3. Power Failure Recovery

Cold boot: If rebooted after power failure under the state of program/fixed-value running, the system indicates “program/fixed-value being maintained” and the operation can be continued.

1. When the system under fixed-value running is powered off, rebooted and operated, the time value is returned to zero. If the system with set slope is powered off, rebooted and re-operated, the slope will be executed based on the current measured value. After the execution of the slope, the system starts fixed-value running; if the system under the state of timed operation of fixed-value running is powered off, rebooted and re-operated, the system will continue to run at the current minute before power off.

2. When the system is powered off and rebooted during program running, if the current step is the third step and the current time is the fifth minute, the program will remain at the third step and the fifth minute. Click Continue for the system to continue to run.

Warm boot: For reboot after power off under the state of fixed-value running, the time will be re-counted from 0; for reboot and continued operation after power off under the state of timed running of fixed-value running, the time will continue to run at the current minute before power off; for reboot after power off under the state of program running, the program will continue to run and is at the current step and the current minute.

Reset: For reboot after power off under the state of program/fixed-value running, the system shows up the following selection interface.

### 4. Cumulative Run



Summing up the working time from the initial use time to the current time for users to check the equipment's status for corresponding maintenance and repair



Indicating the total time from the first run to the end of the current run (excluding system standby time), including hour and minute (99999 hours 59 minutes at maximum) Click “Time Reset” and confirm the cumulative run time will be reset to 00000 hour 00 minute.

## 5. Modification of User Privilege Password


The user can modify the password of corresponding privilege level.

Setting method: press the “Password Modification” button, select the user privilege you want to modify in the pop-up login window and input correct password, then press Enter. If the password is correct, the interface will pop up the password modification window (if the password is incorrect, then the interface shows “the password is incorrect, please re-enter the password”). Input the old password, new password into the window and confirm the password, then press Enter to finish the modification of the password of corresponding privilege level.



## 6. Screensaver Time


Set up the Screensaver time of the controller. There are five options, none, 1 minute, 5 minutes, 15 minutes, and 30 minutes. After selection, the real-time setting of Screensaver time will be

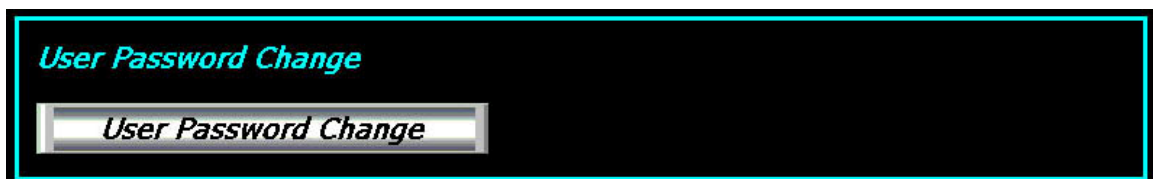

activated.

Please try to use Screensavers in order to extend the life of backlit LCD interface.

The Screensaver time and the interface calibration settings will be activated after completion of the settings. No reboot is needed.

System Settings	
BackLight Time	None
IP Address	192 . 168 . 0 . 100  DHCP
ScreenCalibrate	Calibrate

## 7. IP Address Settings, DHCP Function

IP address settings take effect only after exiting the interface. DHCP is the function to automatically obtain IP address and must be used only when the controller is connected with the router. If not, please do not use this function and the IP addresses are manually assigned.

## 8. Touch Calibration

When the controller's touch is deflected, the controller can be calibrated.

## V. Product Information

Click the Product Information button in the function selection interface to enter the production information viewing interface. The product information shown includes product model, product name, company name, company address, telephone, fax and company website.

Information	
P Mode	UMC1200
P Name	温湿度控制器
Company	UNIQUE
Address	-
Phone	-
Fax	-
Website	-

## VI. UMC1000\_User Host Software

### 1. Software Functions:

The UMC1000\_User user specific software can connect 1 to 16 UMC1100 or 1200 controllers to

provide direct users for operation and use. Main functions are specified below:

- ◆ Real-time monitoring (monitor the real-time data, signal location status, actual output status)
- ◆ Watch list (monitor the running status of 1 to 16 controllers)
- ◆ History curve playback (play back the downloaded historical data curves within the controller)
- ◆ Program edit (edit program process and connection)
- ◆ Communication configuration (configure the IP address of the controller)
- ◆ FTP upload and download (historical data, process connection file, advanced updates)
- ◆ Real-time curve, printing
- ◆ Fault history view (view the fault state of the equipment)
- ◆ Remote fixed-value control (all settings of fixed-value running)
- ◆ Remote program control (all settings of program running)
- ◆ Setting of user logon privilege
- ◆ Multiple language selection


## 2. Communication Settings

Steps to realize direct communications between the controller and the PC:

- 1) Check whether the network cable connection between the controller and the PC.
- 2) Manually set the IP address of the PC:

Manually set the PC IP address for WINDOWS2000 or XP operation to 200.200.200.200. If there are several NICs, please check before setting which NIC is connected with the controller.

The interface for manual setting of IP addresses is shown below:

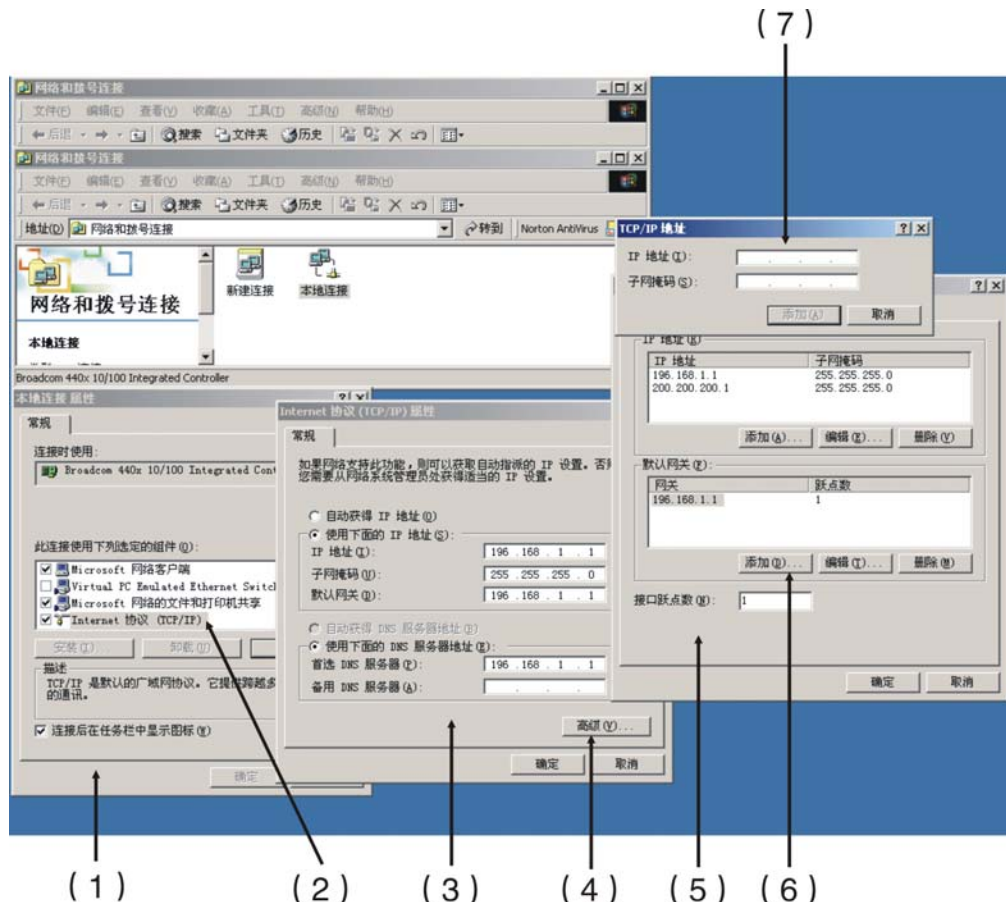


- 1) Enter the attributes window of Network Neighborhood and select the attributes interface of "Local Connection" (1).

- 2) Double click (2) Internet Protocol (TCP/IP) to enter the interface of Fig. 3, select "Use the below IP address" and then click (4) "Advanced" button to enter Fig. (5).
- 3) Click (6) "Add" button to enter the interface of Fig. (7), modify the IP address to 200.200.200.200. Its subnet mask must be the same with that of the NIC.
- 4) After the setting, press "Add" button, then always press the "Enter" button to the end.


Note: after setting of the IP address, you don't need to reset the IP address for re-connection of the same PC with the controller.

### 3. Software Installation


- 1) Run UMC1000\_User\_Install.exe to start software installation.

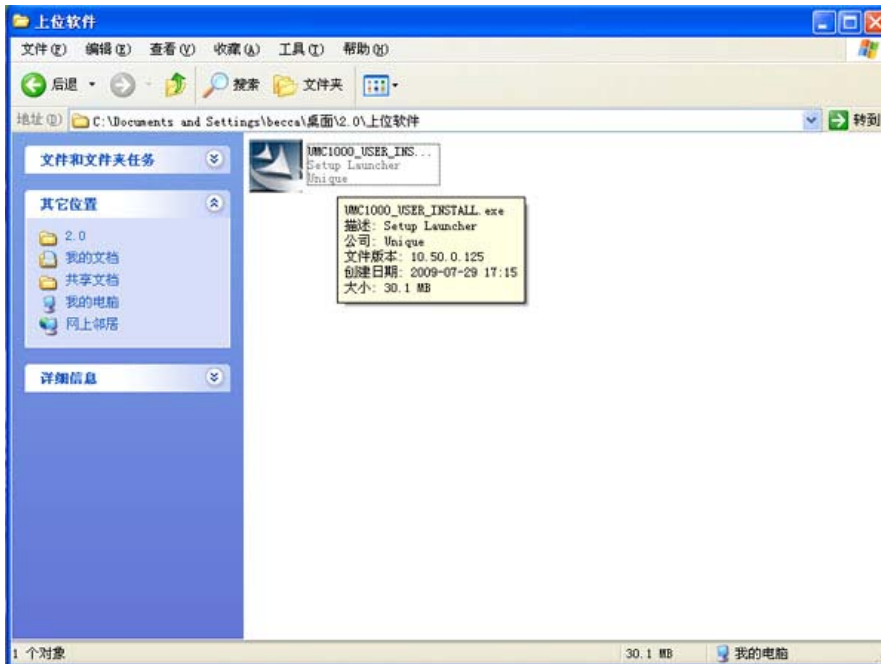


- 2) Select language for the installation process.

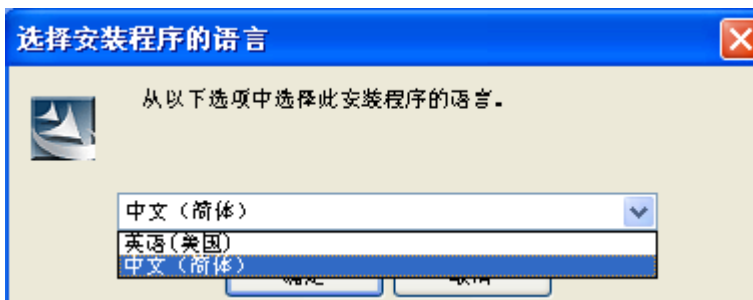

- 3) Specify the installation directory, use the [Change] button to enter the directory selection interface, then click [Next] to start installation.

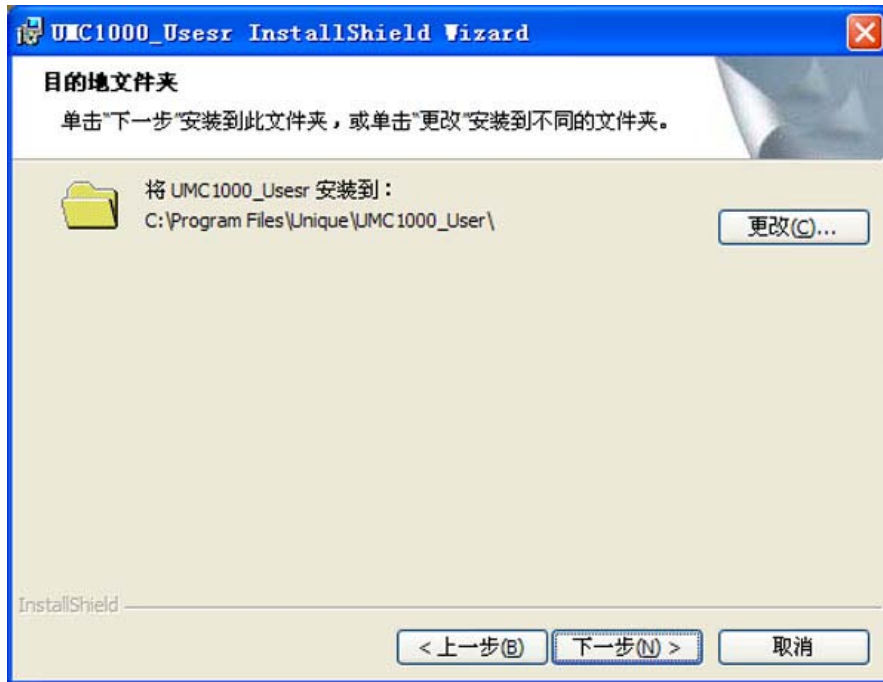


- 4) The installation may last for a few minutes. The Finish interface will show up after completion of the installation.

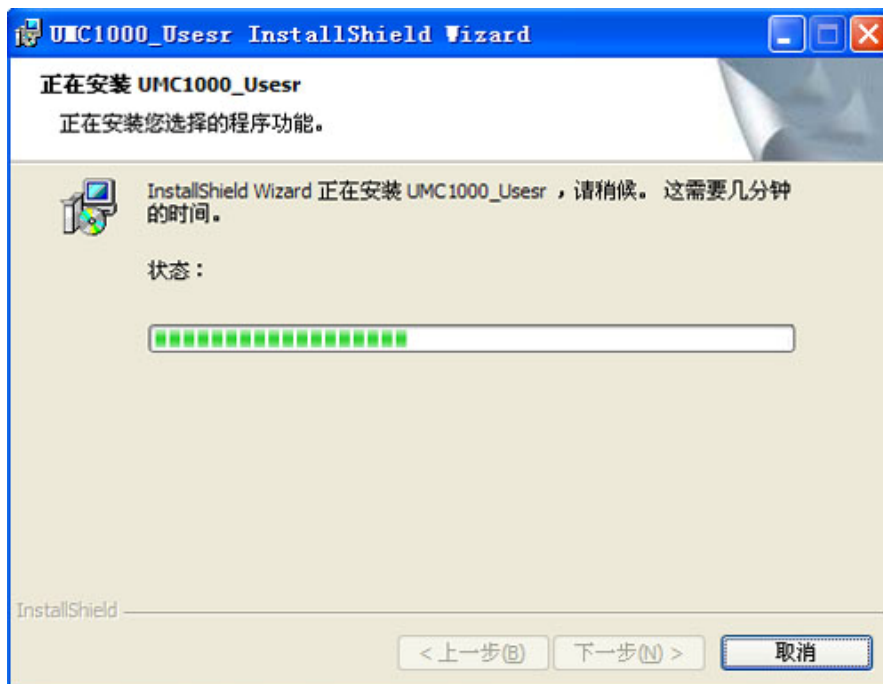

- 5) Select Launch UMC1000\_User, then click "Finish" to exit the installation and immediately launch the UMC1000 host software.



- 6) After the installation is finished, a green shortcut icon of UMC1000\_User will appear on the desktop. Double click the shortcut icon to run the software.

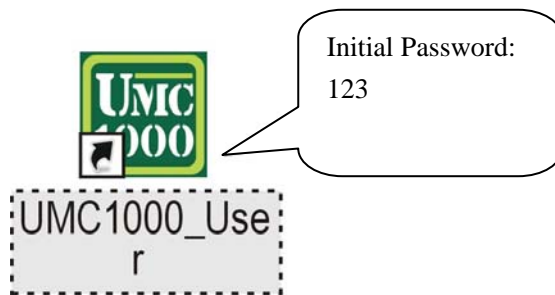

#### 4. Software Login



- 1) User name-> Select a user name



Password-> Input the logon password  
 Modify -> Modify the logon password  
 Login -> Login the software  
 Exit -> Exit the software

## 2) Modification of the login password




The image shows a 'user LOGIN' window. On the left is a graphic with a blue background, a yellow arrow pointing down, and a computer monitor with a green screen and a key. On the right is the login form. It features the 'UNIQUE' logo at the top. Below the logo is a horizontal line. Then, there are four input fields: 'User name:' with a dropdown menu showing 'Admin [管理员]', 'Password:' with three asterisks, 'Input new password:', and 'Confirm password:'. At the bottom are three buttons: 'Cancel', 'OK', and 'Exit'.

Input new password: -> Input new logon password  
 Confirm password: -> Confirm the input password  
 Cancel -> Cancel the password modification  
 OK -> Finish the password modification  
 Exit -> Exit the software

## 5. Communication Connection

- 1) In the first run of the software, a prompt will pop up indicating that the communication configuration needs to be done. Select "Yes" to start configuration and select "No" to ignore the prompt, or click the icon of [Fig. 2] to enter the communication configuration interface.

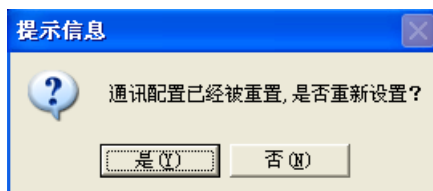

[Fig. 1]



[Fig. 2]

- 2) The interface of Communication Configuration is as shown below. The IP address configuration must be consistent with that of the controller and the same with the numbers of the first 3 sections of the native IP. Then the connection can be conducted. At the meantime, the IP address of the controller must not be the same with the native IP.




[Fig. 3]

- 3) Shortcut icon on the main interface (see below), communication connection or click the Real-time Monitor of Communication Connection on the menu bar.  
Note: before communication connection, please check whether the local firewall has been shut down or set the firewall to enable the TCP protocol of any local port for external 20 ports.



[Fig. 4]

- 4) After successful connection, it will show as follows, each box presents a controller. From top to bottom, the information bar on the right side indicates: TAG name of the controller, running status, current temperature (only indicated in UMC1200). Click the TAG name to re-edit, click the yellow test chamber to enter the detailed operation interface of the controller.

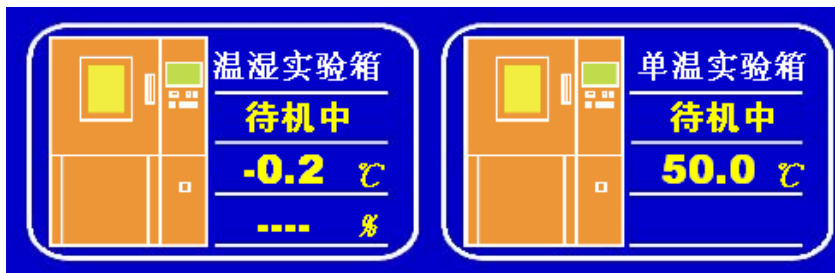

[Fig. 5]

## 6. Use the Host Software to Export Files from the Controller

- 1) Please finish the operation of "Communication Connection" before this operation.



[Fig. 1]


- 1) After entering the detailed interface, click the second icon of [Fig. 1] to open the FTP function dialog box. Please note that the controller must be under remote mode this time.




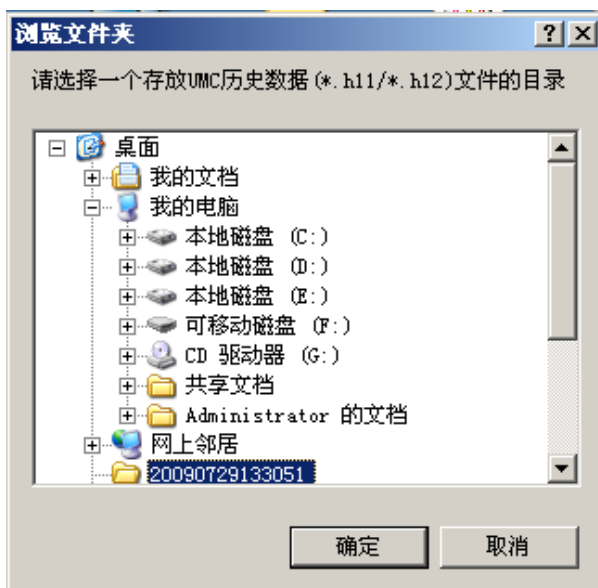
[Fig. 2]

## 7. Examples of History Playback

- 1) Export historical data file from the controller. The exported file is stored in the folder named with export time, as shown below:

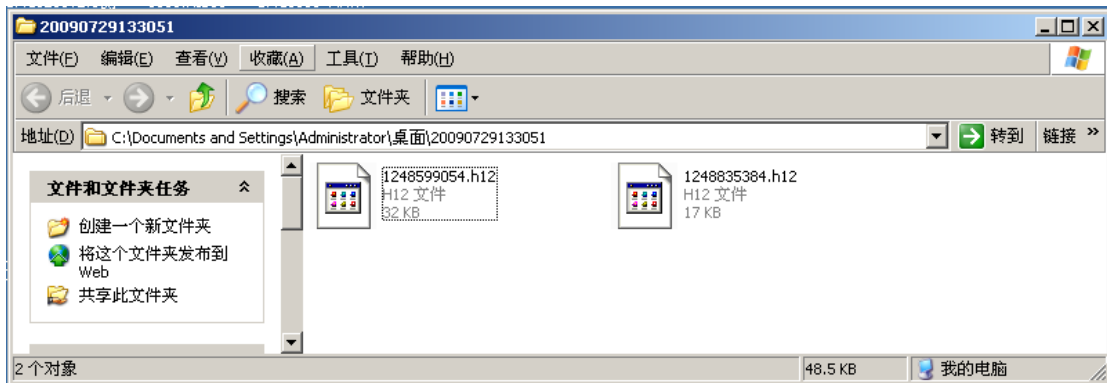


- 2) Enter the history playback interface of the host software, select the  button, then the folder selection list will pop up. Select the exported folder and press Enter, as shown below:




- 3) After finishing the above step, if there are historical data in the folder, the dialog box of "Save the

file” will pop up. Enter the name and save the file.



- 4) Click the  button to open the file saved in the last step. Pop up the “History Curve Setting” window. The time shown in the window is the start time of the data saved in the file. Set the intended start time and the time interval, press Enter to play back the curve of this time section.



Similarly, you can use the  button to modify the start time or time interval.

## 8. Use the Host Software to Create or Modify Process file

- 1) After running the host software, click the icon shown in [Fig. 1] or click the Program Edit on the menu bar to enter the process editing interface.




[Fig. 1]



[Fig. 2]

- 2) [Fig. 2] shows the shortcut icon shown in the Process Edit, click the second icon to create a new process file or click the third icon to open an existing process file.

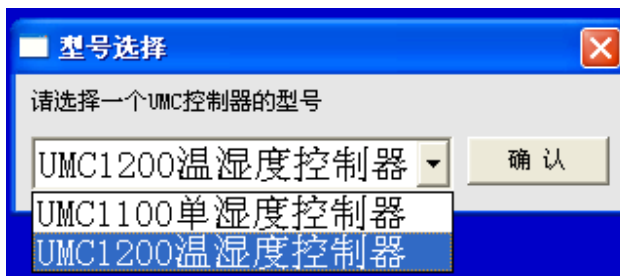

[Fig. 3]

- 3) If New is selected before, then select the model of the controller in the interface shown in [Fig. 3], press Enter to enter the edit interface. UMC1000 series support 1000 processes at maximum and 100 steps can be set in each process. In addition, 10 connections can be set and 10 processes at most can be edited in each connection.
- 4) After finishing the edit, click the fourth icon shown in [Fig. 2] to save the process file. Similarly, you can select the fifth icon to transfer the process files to a U disk.
- 5) Use the host software to upload historical data  
Please refer to the [6. Use the host software to export files from the controller]. The downloaded historical data will be stored in a folder named with the upload time as single small files of 32KB at most.

## 9. Use the Host Software to play back Historical Data

- 1) After running the UMC1000, select the icon shown in [Fig. 1], or select the History Curve on the menu bar to enter the history curve interface.




[Fig. 1]



[Fig. 2]


- 2) The [Fig. 2] shows the shortcut icon of the history curve interface. If you just execute the [Use the

Host Software to Upload Historical Data] or export historical data from the controller to a U disk, then click the second icon shown in [Fig. 2] to conduct data conversion.

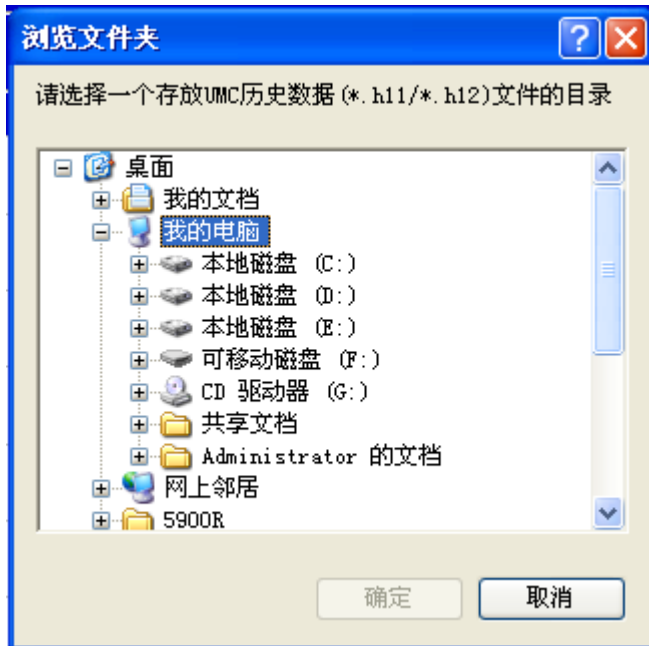

[Fig. 3]

Select in the interface shown in [Fig. 3] the folder to store the uploaded or exported historical data. After selecting the right folder, click Enter and the dialog box to save the file will pop up. Enter the file name and select the storage path, click Save to finish the conversion operation.

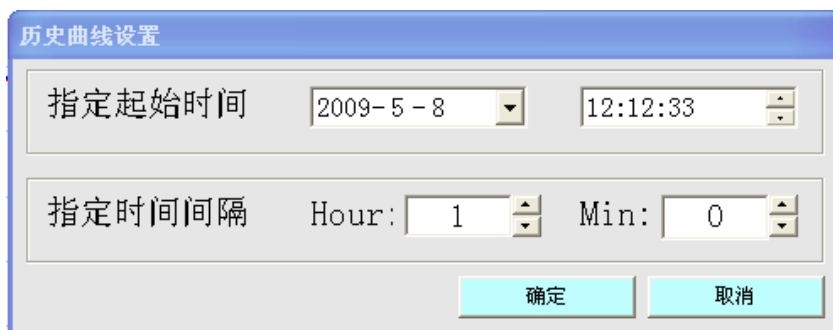

[图 4]

- 3) After finishing the data conversion operation, you will get a UMC historical data file. Use the third icon shown in [Fig. 2] to open the file. Then the start time and time interval selection interface shown in [Fig. 42] will pop up. The start time shown in the interface is the start time of the currently opened historical data file. The maximum time interval is 168 hours. If you want to change the playback interval, then click the fourth icon shown in [Fig. 2] to reset. At the meantime, if you need to change the axes of the curve, you can click the sixth icon shown in [Fig. 2] to make relevant settings.
- 4) Click the fifth icon shown in [Fig. 2] to save the historical data on the current page as UMC historical data file or Microsoft Office Access database file.

## 10. Use the Host Software to Conduct Remote Control

- 1) Before carrying out the following operations, please make sure operation of [Communication Connection] has been finished.



[Fig 1]

- 2) After entering the details interface, click the fifth icon shown in [Fig 1] to control fixed-value running and the sixth icon to control program running.


## 11. Description of File Types Involved in the Operation of Host Software

- a) \*.d12 file: parameter file of UMC temperature and humidity controller
- b) \*.d11 file: parameter file of UMC single temperature controller
- c) \*.p12 file: process file of UMC temperature and humidity controller
- d) \*.p11 file: process file of UMC single temperature controller
- e) \*.h12 file: history file exported from UMC temperature and humidity controller
- f) \*.h11 file: history file exported from UMC single temperature controller
- g) \*.his12 file: historical data file exported from UMC temperature and humidity controller
- h) \*.his11 file: historical data file of UMC single temperature controller
- i) \*.u12 file: advanced update file of UMC temperature and humidity controller system
- j) \*.u11 file: advanced update file of UMC single temperature controller system

## VII. Ethernet Connection

There are three connection modes between UMC1000 controllers and the host PC, including direct connection mode, LAN mode and Internet mode.

- (1) Direct connection between the PC and 1 UMC1000 controller

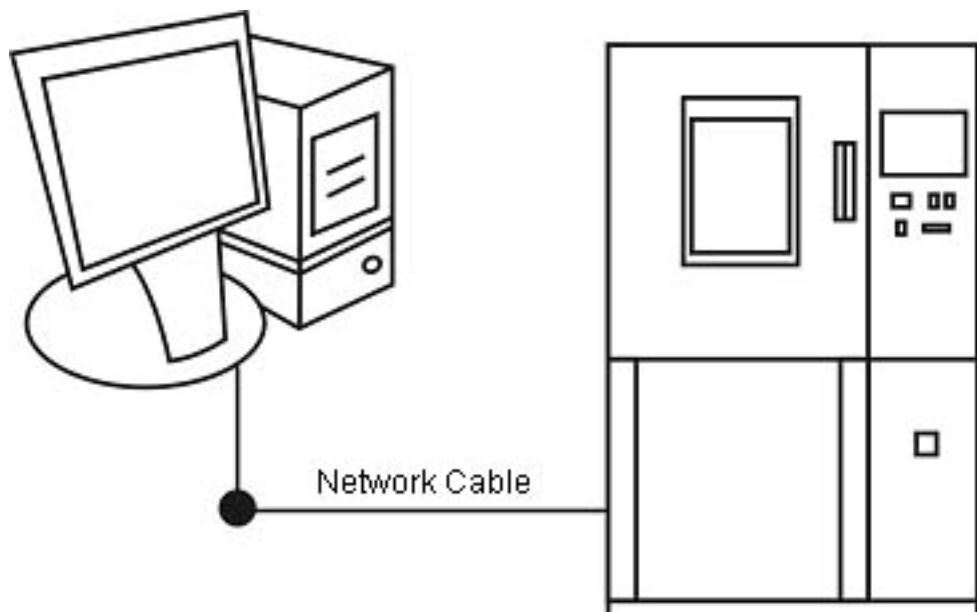


Network cable|:

To directly connect the PC with one controller, the IP addresses of the PC and the controller must be set within 1 section.

For example: if the IP address of the controller is "200.200.200.190", then the PC's IP address can be set to "200.200.200.200".


- (2) LAN connection between several PCs and several UMC1000 controllers



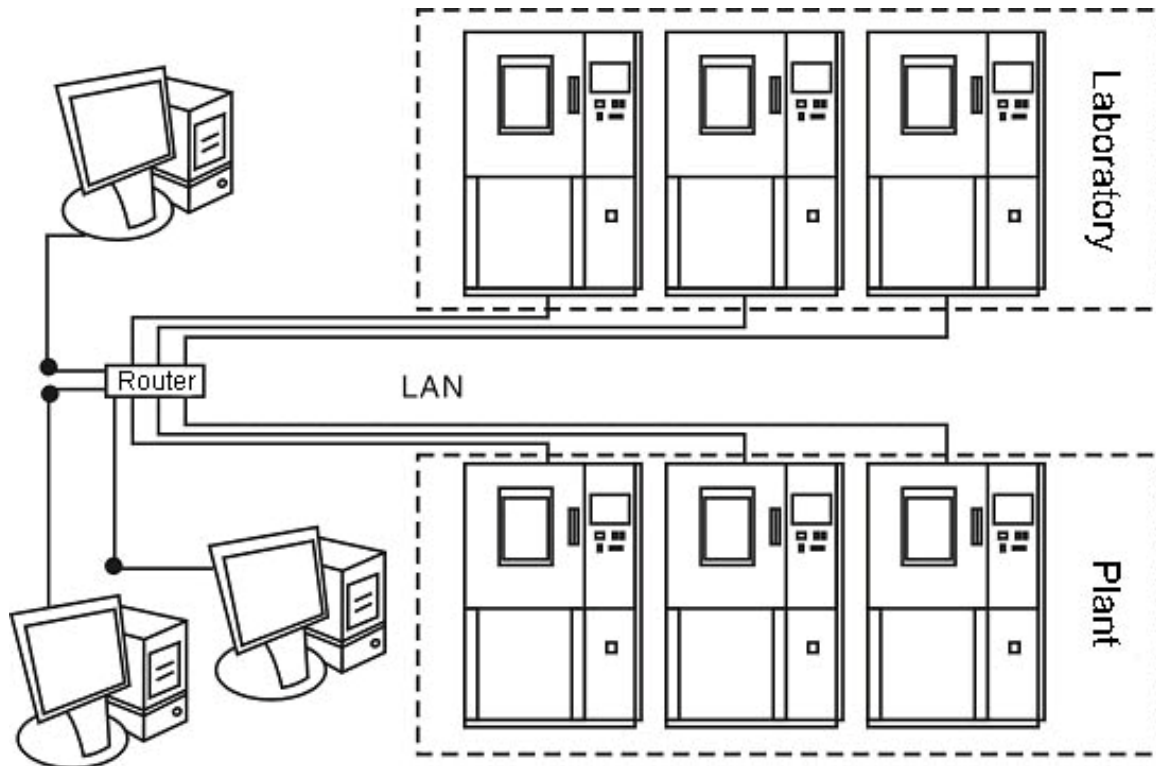

To connect several UMC1000 controllers with several host PCs, a switch and or router should be used to form a local area network. The IP address of UMC controllers can be automatically obtained from DHCP.

### (3) WEB SERVER remote synchronization

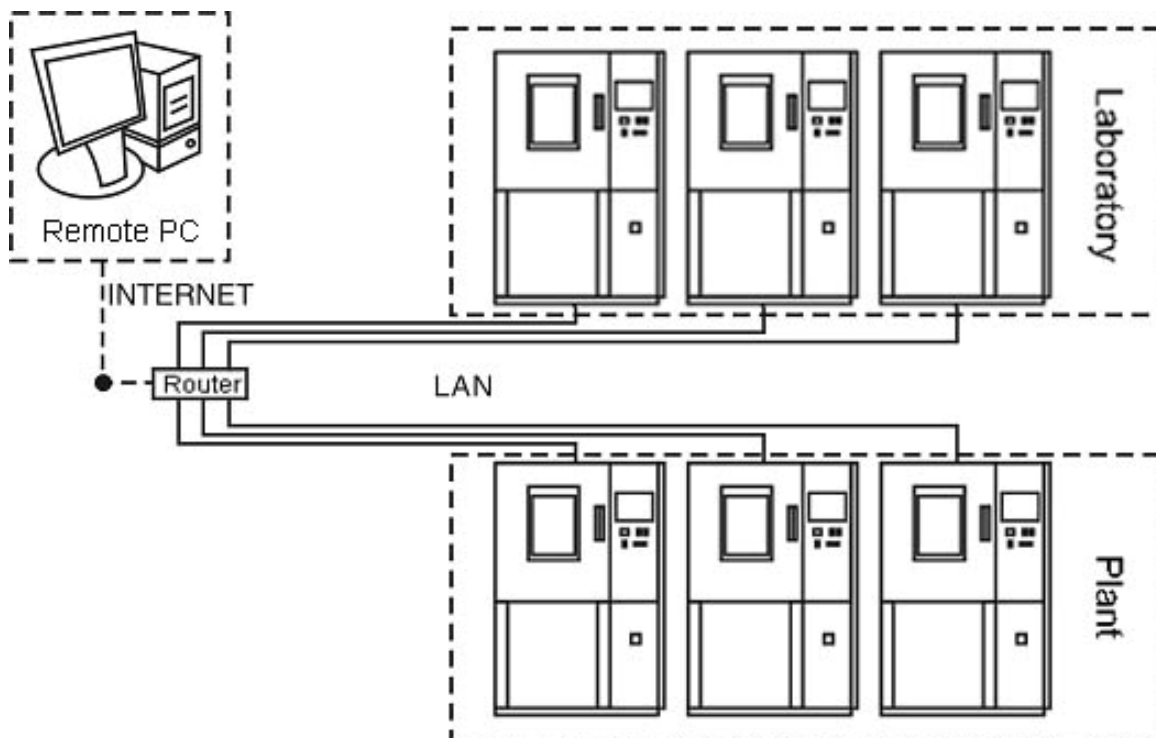

For example: if the user's PC and controller is within the same internal network, the user needs to open the IE browser to access the logon interface to choose operation or monitor. If you choose operation, you must input the user name and password. The default user name is admin, with the default password of 123. The user name cannot be changed but the password can be changed.

## Appendix:

### Table of UMC1200v2.0 ModbusTCP/IP Protocol Communication Addresses

User can refer to the standard MODBUS TCP/IP protocol and develop the third party program according to the following addresses.

#### MODBUS Function Code &H01/&H0F

No.	Address	Attribute	Description
1	&H0000	ReadOnly	DCU Output U01
2	&H0001	ReadOnly	DCU Output U02
3	&H0002	ReadOnly	DCU Output U03
4	&H0003	ReadOnly	DCU Output U04
5	&H0004	ReadOnly	DCU Output U05
6	&H0005	ReadOnly	DCU Output U06
7	&H0006	ReadOnly	DCU Output U07
8	&H0007	ReadOnly	DCU Output U08
9	&H0008	ReadOnly	DCU Output U09
10	&H0009	ReadOnly	DCU Output U10
11	&H0010	ReadOnly	DCU Output U11
12	&H0011	ReadOnly	DCU Output U12
13	&H0012	ReadOnly	DCU Output U13
14	&H0013	ReadOnly	DCU Output U14
15	&H0014	ReadOnly	DCU Output U15
16	&H0015	ReadOnly	DCU Output U16
17	&H0016	ReadOnly	DCU Output U17
18	&H0017	ReadOnly	DCU Output U18
19	&H0018	ReadOnly	DCU Output U19
20	&H0019	ReadOnly	DCU Output U20
21	&H0020	ReadOnly	DCU Output U21
22	&H0021	ReadOnly	DCU Output U22
23	&H0022	ReadOnly	DCU Output U23
24	&H0023	ReadOnly	DCU Output U24
25	&H0024	ReadOnly	DCU Output U25
26	&H0025	ReadOnly	DCU Output U26
27	&H0026	ReadOnly	DCU Output U27
28	&H0027	ReadOnly	DCU Output U28
29	&H0028	ReadOnly	DCU Output U29
30	&H0029	ReadOnly	DCU Output U30
31	&H0030	ReadOnly	DCU Output U31
32	&H0031	ReadOnly	DCU Output U32
33	&H0032	ReadOnly	DCU Input 101
34	&H0033	ReadOnly	DCU Input 102
35	&H0034	ReadOnly	DCU Input 103
36	&H0035	ReadOnly	DCU Input 104



37	&H0036	ReadOnly	DCU Input 105
38	&H0037	ReadOnly	DCU Input 106
39	&H0038	ReadOnly	DCU Input 107
40	&H0039	ReadOnly	DCU Input 108
41	&H0040	ReadOnly	DCU Input 109
42	&H0041	ReadOnly	DCU Input 110
43	&H0042	ReadOnly	DCU Input 111
44	&H0043	ReadOnly	DCU Input 112
45	&H0044	ReadOnly	DCU Input 113
46	&H0045	ReadOnly	DCU Input 114
47	&H0046	ReadOnly	DCU Input 115
48	&H0047	ReadOnly	DCU Input 116
49	&H0048	ReadOnly	TS01 Signal Output Status
50	&H0049	ReadOnly	TS02 Signal Output Status
51	&H0050	ReadOnly	TS03 Signal Output Status
52	&H0051	ReadOnly	TS04 Signal Output Status
53	&H0052	ReadOnly	TS05 Signal Output Status
54	&H0053	ReadOnly	TS06 Signal Output Status
55	&H0054	ReadOnly	Temperature Alarm 01 Output Status
56	&H0055	ReadOnly	Temperature Alarm 02 Output Status
57	&H0056	ReadOnly	Temperature Alarm 03 Output Status
58	&H0057	ReadOnly	Temperature Alarm 04 Output Status
59	&H0058	ReadOnly	Humidity Alarm 01 Output Status
60	&H0059	ReadOnly	Humidity Alarm 02 Output Status
61	&H0060	ReadOnly	Humidity Alarm 03 Output Status
62	&H0061	ReadOnly	Humidity Alarm 04 Output Status
63	&H0062	ReadOnly	Temperature Transducer Off-line Status
64	&H0063	ReadOnly	Humidity Transducer Off-line Status
65	&H0064	ReadOnly	IS01 Signal Output Status
66	&H0065	ReadOnly	IS02 Signal Output Status
67	&H0066	ReadOnly	IS03 Signal Output Status
68	&H0067	ReadOnly	IS04 Signal Output Status
69	&H0068	ReadOnly	IS05 Signal Output Status
70	&H0069	ReadOnly	IS06 Signal Output Status
71	&H0070	ReadOnly	IS07 Signal Output Status
72	&H0071	ReadOnly	IS08 Signal Output Status
73	&H0072	ReadOnly	OS01 Signal Output Status
74	&H0073	ReadOnly	OS02 Signal Output Status
75	&H0074	ReadOnly	OS03 Signal Output Status
76	&H0075	ReadOnly	OS04 Signal Output Status
77	&H0076	ReadOnly	OS05 Signal Output Status
78	&H0077	ReadOnly	OS06 Signal Output Status
79	&H0078	ReadOnly	OS07 Signal Output Status



80	&H0079	ReadOnly	OS08 Signal Output Status
81	&H0080	ReadOnly	EVT01 Signal Output Status
82	&H0081	ReadOnly	EVT02 Signal Output Status
83	&H0082	ReadOnly	EVT03 Signal Output Status
84	&H0083	ReadOnly	EVT04 Signal Output Status
85	&H0084	ReadOnly	EVT05 Signal Output Status
86	&H0085	ReadOnly	EVT06 Signal Output Status
87	&H0086	ReadOnly	EVT07 Signal Output Status
88	&H0087	ReadOnly	EVT08 Signal Output Status
89	&H0088	ReadOnly	Temperature Running
90	&H0089	ReadOnly	Temperature Maintaining
91	&H0090	ReadOnly	Temperature Up
92	&H0091	ReadOnly	Temperature Down
93	&H0092	ReadOnly	Humidity Running
94	&H0093	ReadOnly	Humidity Keeping
95	&H0094	ReadOnly	Humidity Up
96	&H0095	ReadOnly	Humidity Down
97	&H0096	ReadOnly	REF1 Signal Output Status
98	&H0097	ReadOnly	REF2 Signal Output Status
99	&H0098	ReadOnly	Lighting Signal Output Status
100	&H0099	ReadOnly	Program Complete Signal Output Status
101	&H0100	ReadOnly	Drain Signal Output Status
102	&H0101	ReadOnly	ACU Communication Connection Status
103	&H0102	ReadOnly	
104	&H0103	ReadOnly	DCU1 Communication Connection Status
105	&H0104	ReadOnly	DCU2 Communication Connection Status
106	&H0105	ReadOnly	
107	&H0106	ReadOnly	
108	&H0107	ReadOnly	Connect and Run: 0-connectionless, 1-connect and run
109	&H0108	ReadOnly	Run Mode; 0-Fixed Value, 1-Program
110	&H0109	ReadOnly	Error Signal Output Status
111	&H0110		
112	&H0111		
113	&H0112	Read/Write	Fixed Temperature Slope Working Status
114	&H0113	Read/Write	Fixed Humidity Slope Working Status
115	&H0114	Read/Write	Fixed Timing Run Status
116	&H0115	Read/Write	Temperature Self Tuning
117	&H0116	Read/Write	Humidity Self Tuning

#### MODBUS Function Code &H03/&H10

No.	Address	Attribute	Description
-----	---------	-----------	-------------



1	&H0000	ReadOnly	Temperature PV Value
2	&H0001	ReadOnly	Humidity PV Value2
3	&H0002	ReadOnly	Temperature MV Value
4	&H0003	ReadOnly	Humidity MV Value
5	&H0004		
6	&H0005		
7	&H0006	ReadOnly	Current Process Steps
8	&H0007	ReadOnly	Current process number, start from zero.
9	&H0008		
10	&H0009		
11	&H0010		
12	&H0011		
13	&H0012		
14	&H0013		
15	&H0014		
16	&H0015		
17	&H0016	ReadOnly	Current process cycle number, start from zero.
18	&H0017	ReadOnly	Current total process cycle number.
19	&H0018	ReadOnly	Current total process time (hour)
20	&H0019	ReadOnly	Current total process time (minute)
21	&H0020	ReadOnly	Current process runtime (hour)
22	&H0021	ReadOnly	Current process runtime (minute)
23	&H0022	ReadOnly	Current step total time (hour)
24	&H0023	ReadOnly	Current step total time (minute)
25	&H0024	ReadOnly	Current step runtime (hour)
26	&H0025	ReadOnly	Current step runtime (minute)
27	&H0026	ReadOnly	Current connection total time (hour)
28	&H0027	ReadOnly	Current connection total time (minute)
29	&H0028	ReadOnly	Current connection runtime (hour)
30	&H0029	ReadOnly	Current connection runtime (minute)
31	&H0030		
32	&H0031	ReadOnly	System Time (Year)
33	&H0032	ReadOnly	System Time (Month)
34	&H0033	ReadOnly	System Time (Day)
35	&H0034	ReadOnly	System Time (Hour)
36	&H0035	ReadOnly	System Time (Minute)
37	&H0036	ReadOnly	System Time (Second)
38	&H0037		
39	&H0038		
40	&H0039	ReadOnly	Fixed Value Runtime (Hour)
41	&H0040	ReadOnly	Fixed Value Runtime (Minute)
42	&H0041	ReadOnly	Current PID area, start from zero.
43	&H0042	ReadOnly	



44	&H0043	Read/Write	Temperature fixed value SV
45	&H0044	Read/Write	Humidity fixed value SV
46	&H0045	Read/Write	Fixed timing runtime.
47	&H0046		
48	&H0047	Read/Write	Fixed value control; 0-Stop、1-Start、2-Maintain
49	&H0048	Read/Write	Program Control; 0-Stop、1-Start、2-Maintain、 4-Skip
50	&H0049		
51	&H0050		
52	&H0051	ReadOnly	Current Temperature SV
53	&H0052	ReadOnly	Current Humidity SV
54	&H0053	ReadOnly	Current Wetbulb PV
55	&H0054	ReadOnly	Current Wetbulb SV
56	&H0055	Read/Write	Fixed temperature slope value
57	&H0056	Read/Write	Fixed humidity slope value